


Procedure for replacing Inverter board CPM2253A/CPM2237A

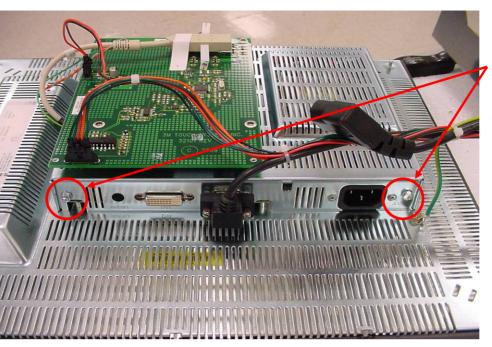


Step 1: Remove the $2 - \frac{1}{4}$ " drive screws from the back cover. Slide cover back to unlock and remove.

Step 2: Unplug the LVDS and remove phillips screw.

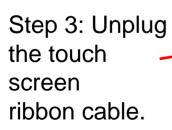


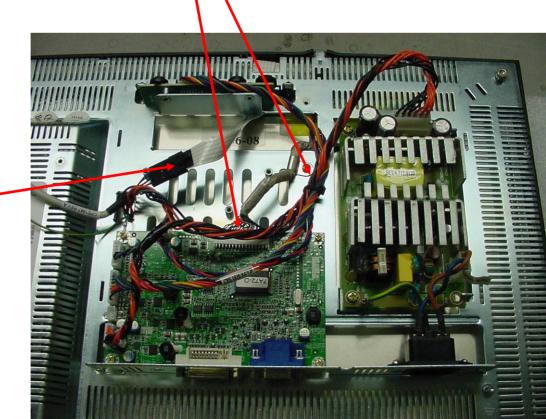


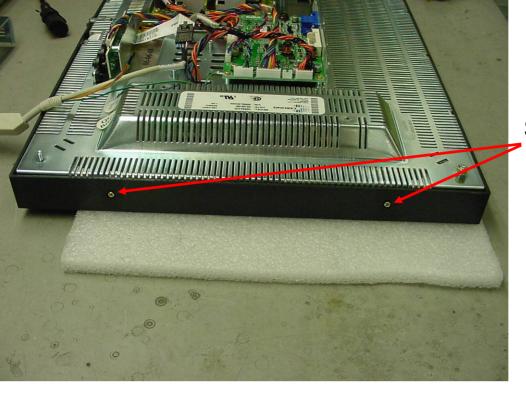

Step 4: Remove the 4 phillips screws from Bezel.


Step 5: release the 6 lock tabs on bezel.

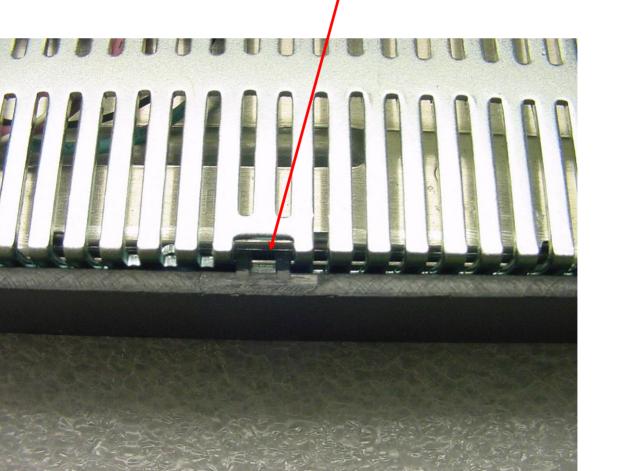

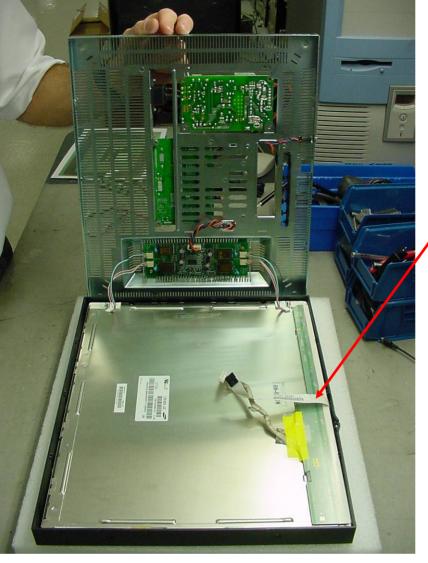

Step 6: separate the LCD from the frame. Use caution not to tear T/S ribbon and inverter lamp wires.

Step 7: remove the harness and lamp connectors

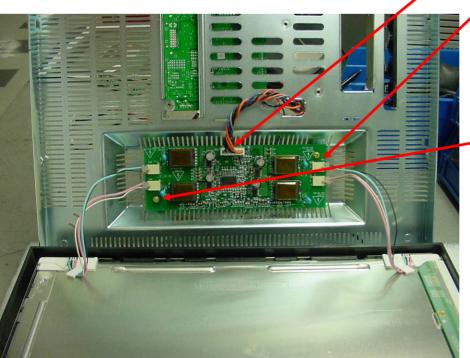

Step 8: remove the 2 phillips screws and install new inverter

Step 9: repeat all steps In reverse to assemble.