


HARNESS MODIFICATION FOR CPS1853L, CPS1861L, AND CPS1896 USED IN CPA4090L, 4064L, 4078L, 4085L, 4088L. THIS PAGE FOR UNITS THAT HAVE THE STANDARD 3M CONTROL BOARD (NOT NETPLEX)

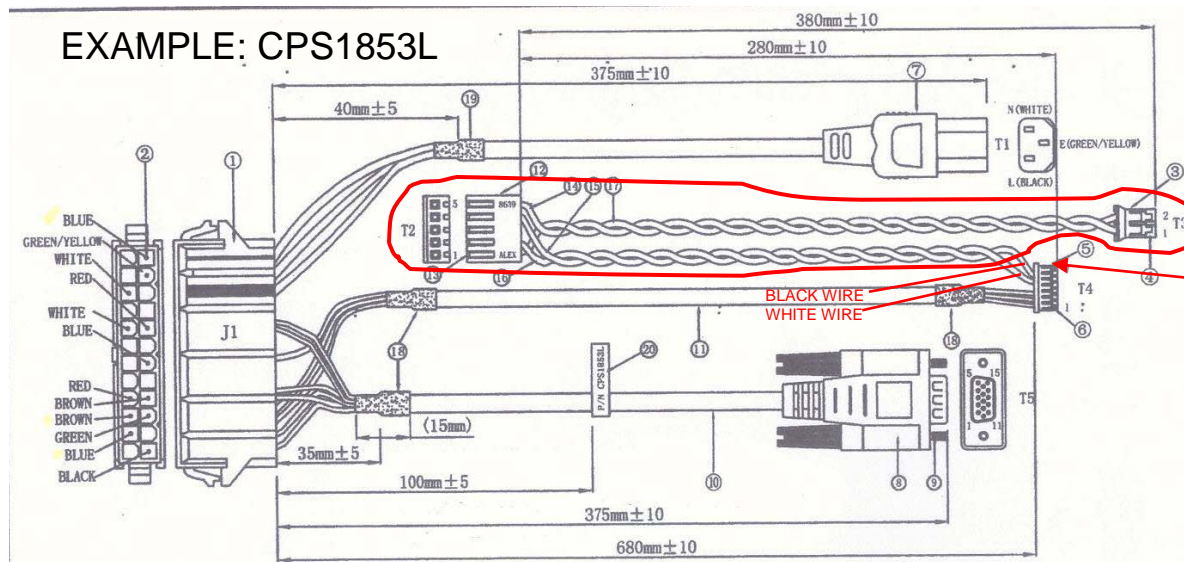

1. DISCONNECT 7-PIN CONNECTOR FROM TOUCH CONTROLLER. CAREFULLY EXTRACT PINS CONNECTED TO BLACK AND WHITE WIRE FROM CONNECTOR T4. AN OBJECT WITH A FINE POINT SUCH AS AN XACTO KNIFE CAN BE USED TO LIFT UP ON THE PLASTIC PIN RETAINER TO RELEASE PINS. DISCARD WIRES CONNECTED WITH T2 AND T3.

3. THIS NEW HARNESS CAN BE PLUGGED BACK INTO THE TOUCH CONTROLLER AND INTO THE A/D BOARD CN13 AS SHOWN BELOW.

2. INSERT BLACK AND ORANGE WIRES OF NEW HARNESS (CPS1862) INTO CONNECTOR T4 AS SHOWN BELOW

