


## Video fix for 044 IGT

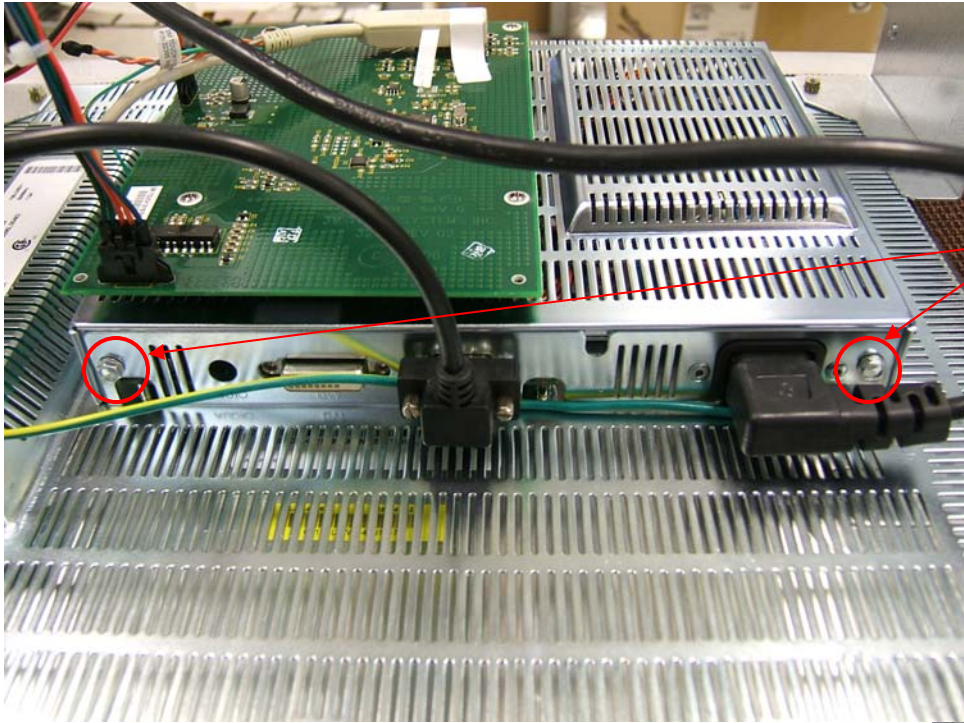

Step 1: Remove the 2 - ¼" drive screws From the back cover. Slide cover back To unlock and remove.

Step 2: Remove Jumper or solder connection In front of VGA input, labeled video.

Step 3: install cover and screws.

