

Compact Hopper Light Guide Replacement Instructions



This document is the copyright of Money Controls Ltd and may not be reproduced in part or in total by any means, electronic or otherwise, without the written permission of Money Controls Ltd. Money Controls Ltd does not accept liability for any errors or omissions contained within this document. Money Controls Ltd shall not incur any penalties arising out of the adherence to, interpretation of, or reliance on, this standard. Money Controls Ltd will provide full support for this product when used as described within this document. Use in applications not covered or outside the scope of this document may not be supported. Money Controls Ltd. reserves the right to amend, improve or change the product referred to within this document or the document itself at any time.

1. Instructions

Figure 1: Unscrew Light guide cover.



Figure 2: Remove Light guide cover.

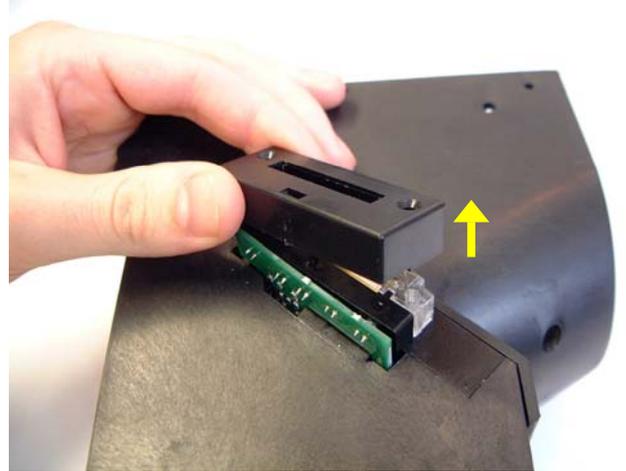


Figure 3: Remove Light guide upper section.

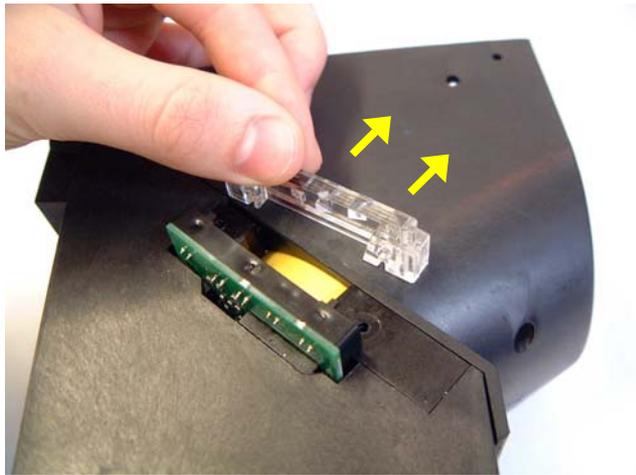


Figure 4: Remove Light guide lower section.


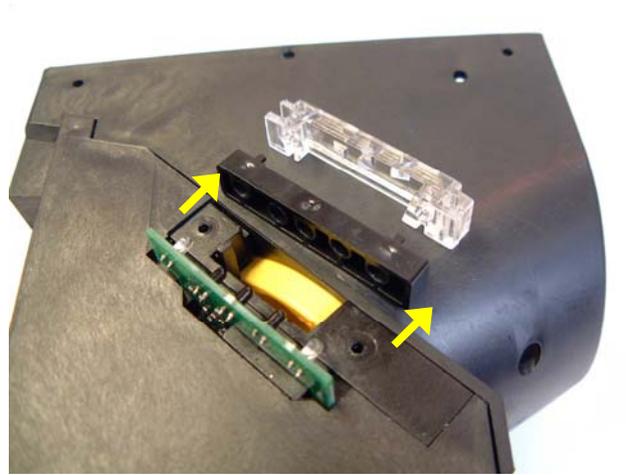


Figure 5: Replace with new light guide Lower section.



Figure 6: Slide under adjuster plate.

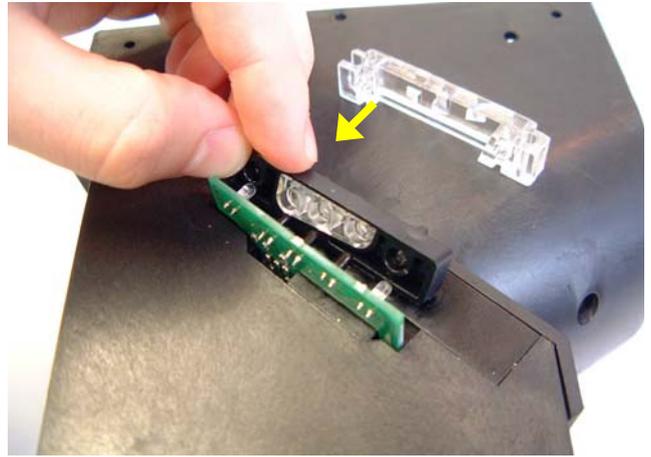

The light guide piece can only be fitted one way, please check the drawing on the right to ensure correct fitting.

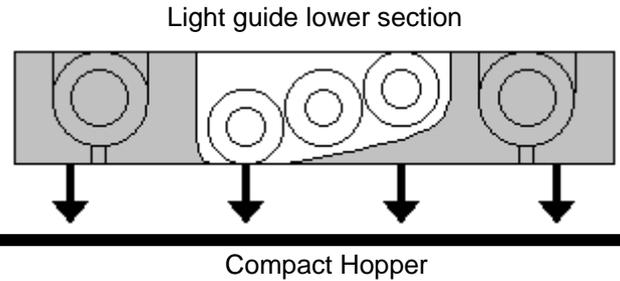


Figure 7: Replace upper section.

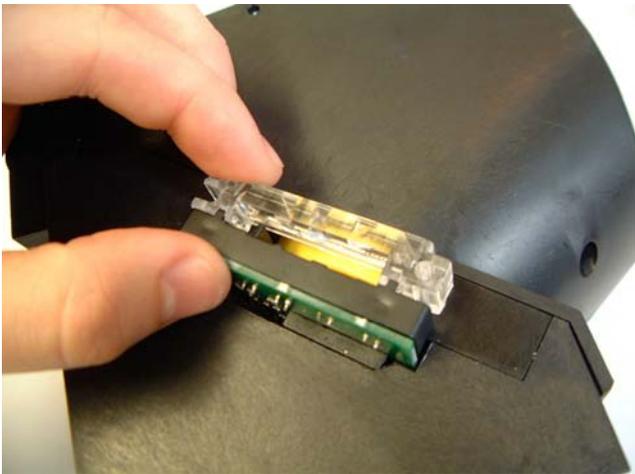


Figure 8: Replace cover.

