Ardac Cleaning Instructions



This document is the copyright of Money Controls Ltd and may not be reproduced in part or in total by any means, electronic or otherwise, without the written permission of Money Controls Ltd. Money Controls Ltd does not accept liability for any errors or omissions contained within this document. Money Controls Ltd shall not incur any penalties arising out of the adherence to, interpretation of, or reliance on, this standard. Money Controls Ltd will provide full support for this product when used as described within this document. Use in applications not covered or outside the scope of this document may not be supported. Money Controls Ltd. reserves the right to amend, improve or change the product referred to within this document or the document itself at any time.

©Money Controls 2005. All rights reserved.

Contents

1.	Introduction		3
2.	Gett	ting Started	4
		Using the cleaning card	
		Cleaning the sensors	

©Money Controls 2005. All rights reserved. Page 2 of 14

Diary of Changes 1.

©Money Controls 2005. All rights reserved. Page 3 of 15

2. Introduction

The aim of these instructions are to aid the user in cleaning and general maintenance of the Ardac note acceptors. These instructions are a general guide only, which apply to all variants of the Ardac note acceptor range.

3. Getting Started

The equipment you need to get started is as follows:

- Ardac cleaning card (1 to a pack) = 49x313
- Cotton buds
- Lint free cleaning cloth
- > 70% or greater IsoPropyl Alcohol (IPA).



There are 2 methods of cleaning which are required.

- Using the cleaning card
- Cleaning the sensors (Opening the note acceptor and manually cleaning the sensors)

©Money Controls 2005. All rights reserved. Page 4 of 16

3.1 Using the cleaning card


The cleaning card is something which should be used as part of a regular maintenance routine. There is no specified time-scale for this maintenance but as a rough guide

- Maximum Once a month
- Minimum Once every 6 months.

Using the cleaning card is very simple.

- Remove power.
- > Turn the head over so that you can see the DIP switches.
- Set Bank 2 Dipswitch 7 to ON.
- > Power up the acceptor and wait until the stacker cycles ONCE.
- Insert the cleaning card in any direction and hold it in place in the note acceptor for up to 5 seconds.
- Release the cleaning card and let it drive into the note acceptor. The cleaning card will then reject back out to the user. A slight pull on the card will remove it from the head.
- Power off.
- > Remove the head and set BANK 2 DIPswitch 7 to OFF.
- Replace the head in the machine.
- Power up.
- Ensure the head cycles twice.

<u>NB – The cleaning cards are saturated with alcohol, and will dry out very quickly. Therefore</u> <u>Money Controls recommend that you use both sides of the card as quickly as possible (E.g.</u> <u>on 4 note acceptors).</u>

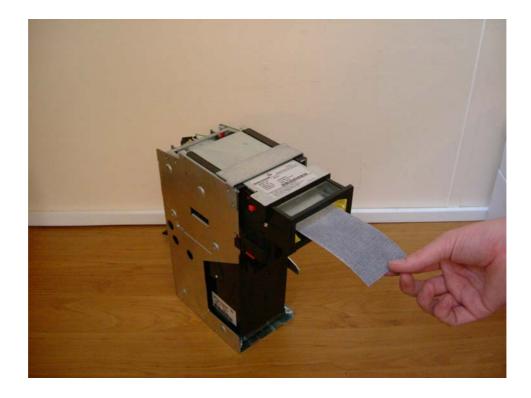

©Money Controls 2005. All rights reserved. Page 5 of 7

3.2 Cleaning the sensors

Cleaning of the sensors should be carried out as part of a regular maintenance routine. There is no specified time-scale for this maintenance but as a rough guide

- Maximum Once a month
- Minimum Once every 6 months.

Cleaning the sensors requires the note acceptor head to be removed from the chassis. The note acceptor does not need to be powered up at this stage.

There are 3 stages of cleaning the sensors.

Clean the sensors on the top plate (TOP TNT sensor and Grey scale) of the note acceptor - using the lint free cleaning cloth and IPA.



©Money Controls 2005. All rights reserved. Page 6 of 7 Clean the sensors on the bottom plate (BOTTOM TNT sensor and Grey scale, the Left & Right front sensor lenses and the Dual Density lense) of the note acceptor - using the lint free cleaning cloth and IPA.



Clean the recessed sensors on both the top and bottom sensor plates (using a cotton bud and IPA).



Following this basic cleaning procedure should maximise performance of the Ardac note acceptor range.

©Money Controls 2005. All rights reserved. Page 7 of 8 This manual is intended only to assist the reader in the use of this product and therefore Money Controls shall not be liable for any loss or damage whatsoever arising form the use of any information or particulars in, or any incorrect use of the product. Money Controls reserve the right to change product specifications on any item without prior notice

> ©Money Controls 2005. All rights reserved. Page 8 of 8