



D9100 REPAIR GUIDE

SYMPTOM	ANALYSIS	COMMENTS
NO OSD	IC403, IC601, SOLDER W102	CHECK OSD CABLE
NO POWER/RASTER	IC101, IC301, Q307, Q308, Q309, Q313, W604, BC306, F101 SOLDER SHORT @ FLYBACK, R408, IC302	CHECK POWER CORD
NO VIDEO	IC401, IC402, SOLDER P601 W601, W401	CHECK SIGNAL CABLE
POOR CONTRAST	IC601, IC401, SOLDER FLYBACK PINS, W401	CHECK MENU ADJUSTMENT
DIM/DARK VIDEO	R121, R408	CHECK MENU ADJUSTMENT AND SCREEN CONTROL
DISTORTED VIDEO	IC201, T501, SOLDER D306, R448	CHECK SIGNAL CABLE AND GROUNDS
VIDEO JITTER	IC301	CHECK SOLDER AND GROUNDS
NO VERTICAL SCAN VERTICAL SIZE	IC301, IC201, R205, R206, R219 R209	CHECK IC201 SOLDERING CHECK MENU ADJUSTMENT
UNIT SHUTS DOWN HORIZONTAL SIZE NO HORIZONTAL SCAN POOR FOCUS	D104, C339, ZD304 (12V), C119 C311, L303 D306 T501, CRT, Q701, Q702	CHECK POWER CORD CHECK MENU ADJUSTMENT CHECK YOKE CONNECTOR CHECK FOCUS ADJUSTMENTS
NO GREEN GREEN SCREEN	IC401, IC402, R435, R461, CRT IC401, IC402, CRT	CHECK SIGNAL CABLE CHECK COLOR SETTINGS
NO RED RED SCREEN	IC401, IC402, R434, R460, CRT IC401, IC402, CRT	CHECK SIGNAL CABLE CHECK COLOR SETTINGS
NO BLUE BLUE SCREEN	IC401, IC402, R436, R462, CRT IC401, IC402, CRT	CHECK SIGNAL CABLE CHECK COLOR SETTINGS