



D9300 REPAIR GUIDE

SYMPTOM	ANALYSIS	COMMENTS
NO OSD	IC403, IC601, SOLDER W102	CHECK OSD CABLE
NO POWER/RASTER (RELAY CLICKING)	IC101, IC301, Q307, Q308, Q309, Q313, W604, BC306, F101, T501, D111, R408, IC302, T101, C132, R121, R102	CHECK POWER CORD AND SYNC WIRE ROUTING
NO VIDEO "NO SIGNAL" MESSAGE POOR CONTRAST	IC401, IC402, IC601, INLINE RESISTOR IC601, IC401, SOLDER FLYBACK PINS, R518, R522	CHECK SIGNAL CABLE CHECK SIGNAL CABLE CHECK MENU ADJUSTMENT
DIM/DARK VIDEO	R121, R408, R522	CHECK MENU ADJUSTMENT AND SCREEN CONTROL
DISTORTED VIDEO	IC201, T501, SOLDER D306, R448	CHECK SIGNAL CABLE AND GROUNDS
VIDEO JITTER INTERMITTENT VIDEO	IC301 INLINE RESISTOR, C328 AND D113 SOLDER	CHECK SOLDER AND GROUNDS CHECK SIGNAL CABLE
NO VERTICAL SCAN VERTICAL SIZE	IC301, IC201, R205, R206, R219 R209	CHECK IC201 SOLDERING CHECK MENU ADJUSTMENT
UNIT SHUTS DOWN HORIZONTAL SIZE NO HORIZONTAL SCAN POOR FOCUS PINCUSHION	D104, C339, ZD304 (12V), C119 C311, L303 D306 T501, CRT, Q701, Q702 IC302 SOLDER	CHECK POWER CORD CHECK MENU ADJUSTMENT CHECK YOKE CONNECTOR CHECK FOCUS ADJUSTMENTS CHECK MENU ADJUSTMENT
NO GREEN GREEN SCREEN	IC401, IC402, R435, R461, CRT IC401, IC402, CRT	CHECK SIGNAL CABLE CHECK COLOR SETTINGS
NO RED RED SCREEN	IC401, IC402, R434, R460, CRT IC401, IC402, CRT	CHECK SIGNAL CABLE CHECK COLOR SETTINGS
NO BLUE BLUE SCREEN	IC401, IC402, R436, R462, CRT IC401, IC402, CRT	CHECK SIGNAL CABLE CHECK COLOR SETTINGS