


# Procedure for replacing A to D Board CPM2376

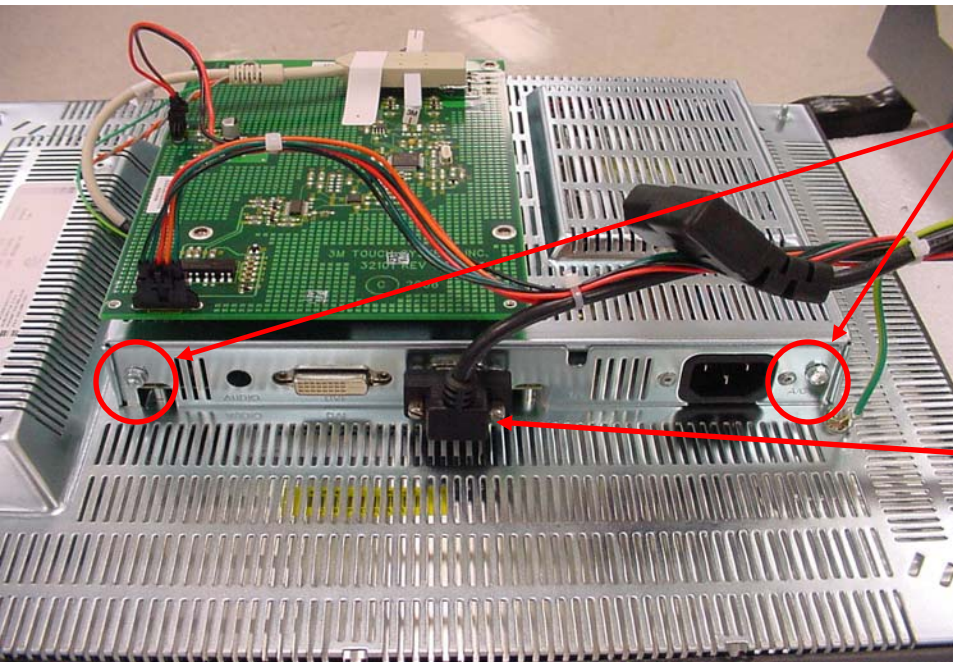

Step 1: Remove the 2 – ¼” drive screws from the back cover. Slide cover back to unlock and remove. Unscrew the 2 nuts Holding the VGA Connector to the A to D board.

Step 2: Remove 5 harness connectors. Then remove the 4 Phillips head screws.

Step 3: remove Board and install Replacement Board.

Step 4: Install the 4 Phillips head screws & Connectors.

Step 5: Install Back cover. Check To make sure you have not pinched any wires. Screw in VGA connector.

