




**WBA Brush Kit
JCM Part No. 701-000056**

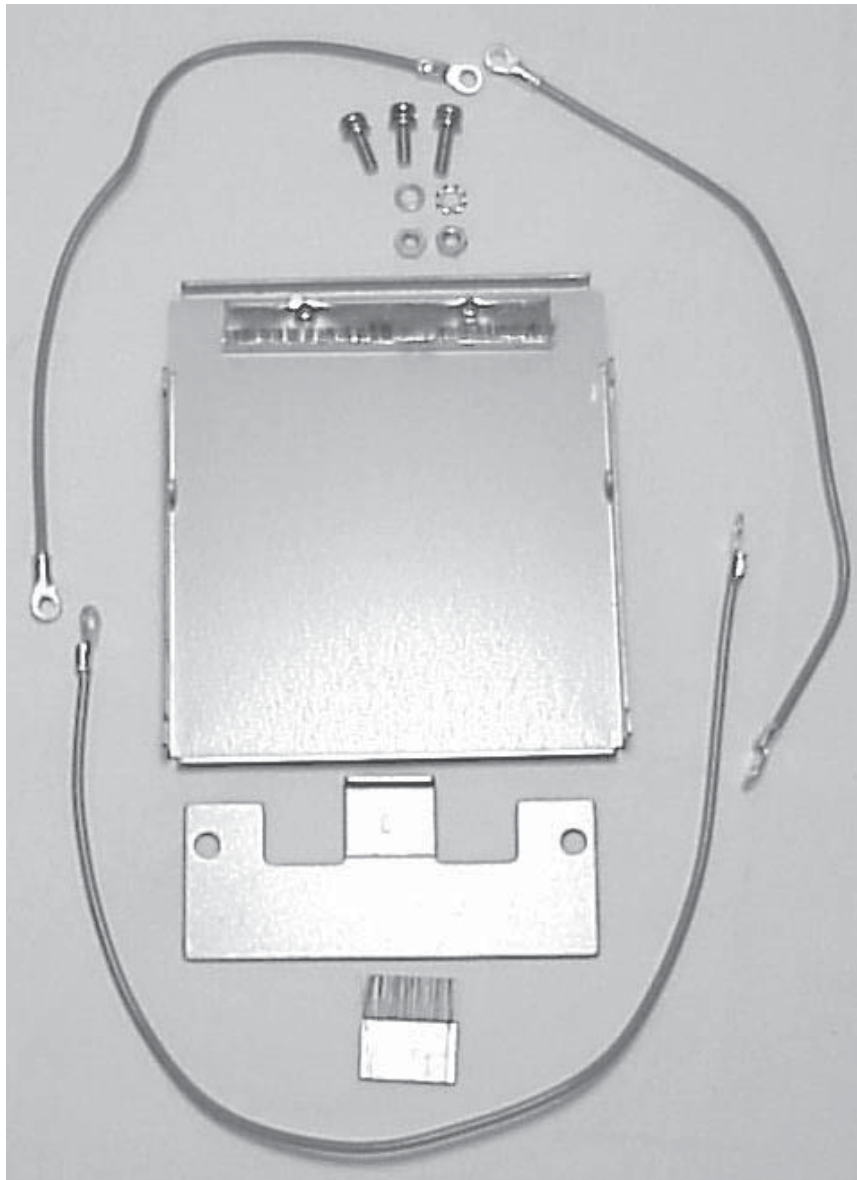


JCM American
925 Pilot Rd.
Las Vegas, NV 89119

Office: (800) 683-7248 **Technical Support:** (702) 651-3444 **FAX:** (702) 651-0214
E-Mail: techsupport@jcm-american.com **Web-Site:** www.jcm-american.com



WBA™ Brush Kit

The first step in this procedure is to attach the small brush (Part No. 076000) to the plate (Part No.001).



1. Peel off the paper covering the adhesive backing. this is the dull side of the brush part.

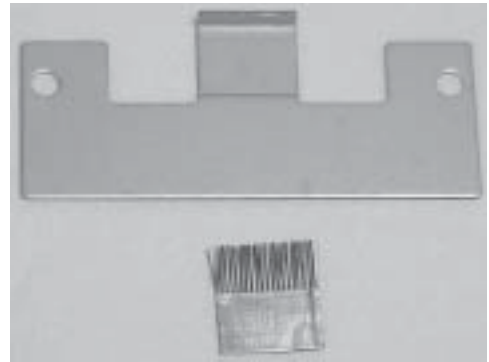

2. Position the brush in the middle of the plate.

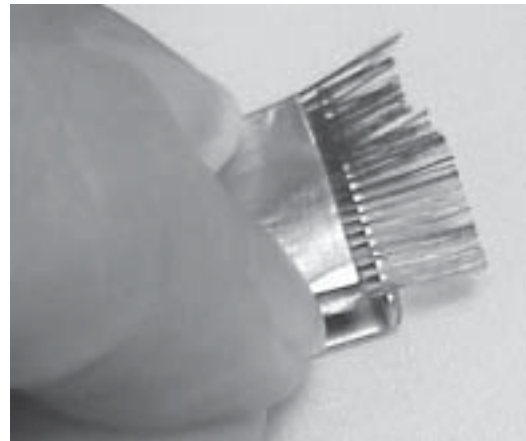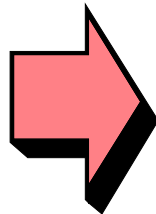

3. Press down firmly to secure the brush on the plate.

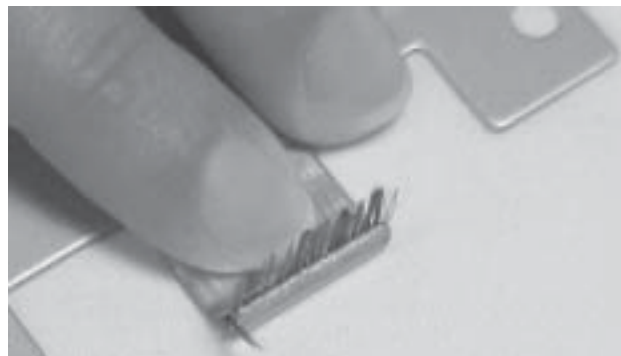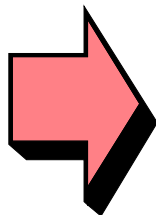

WBA™ Brush Kit

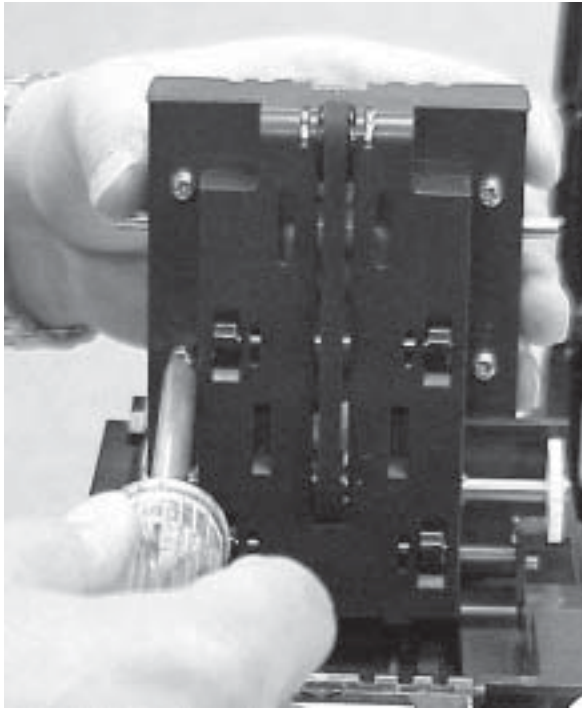


Figure One.

Step 1.

Open the transport cover and remove the two lower screws (see photo above).

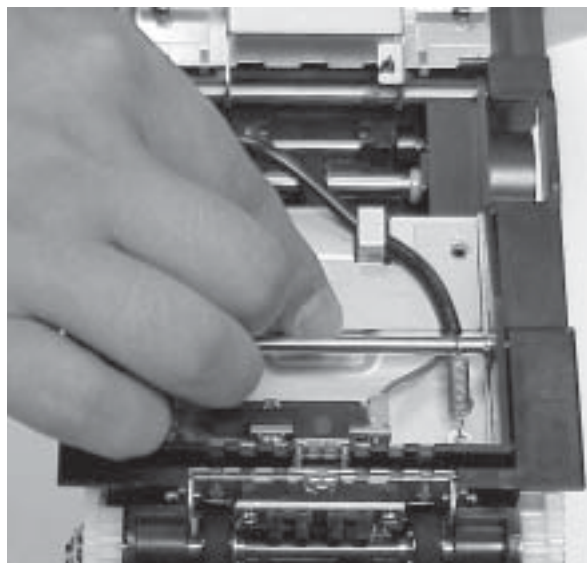


Figure Two

Step 2.

Slide the new plate (Part No. 076001) onto the transport.

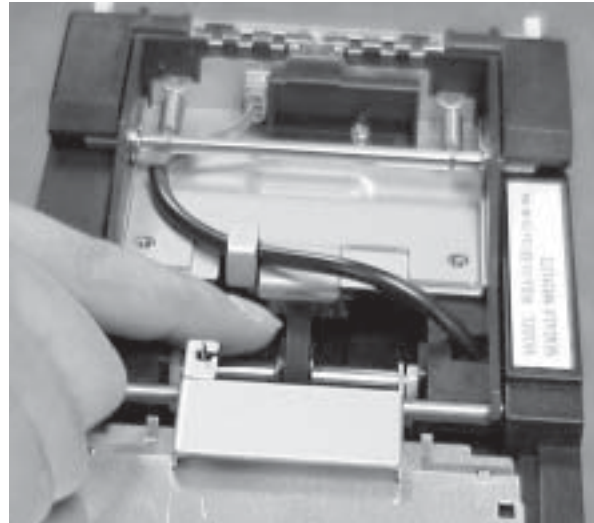


Figure Three

Make sure the brush is positioned as shown in Figure Three.

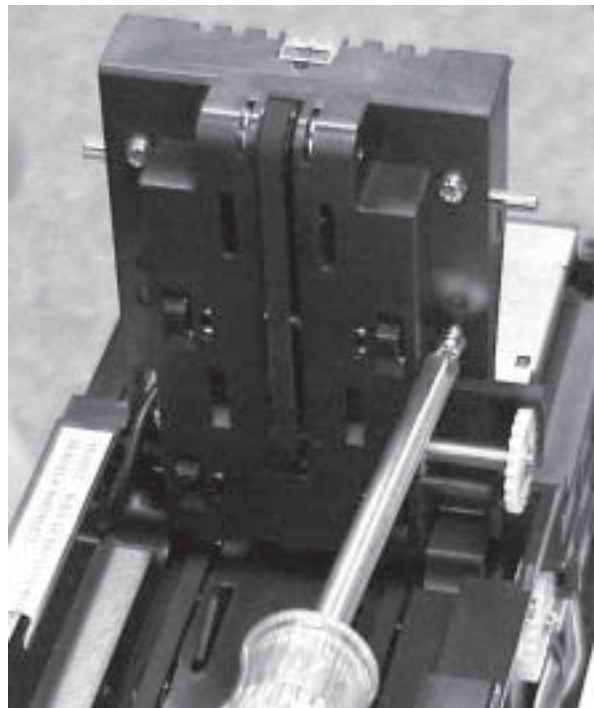


Figure Four

Step 3.

Insert the new screws (Part No. 046996) in the holes where the screws were removed in Step One.

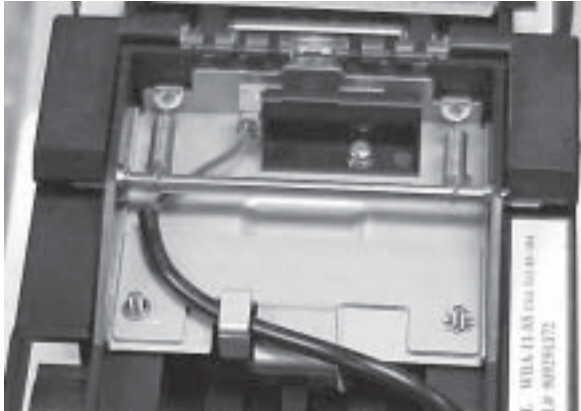


Figure Five

Step 4.

Place the star washer (Part No. 006371) and the flat washer (Part No. 004016) on the screws as shown in Figure 5.

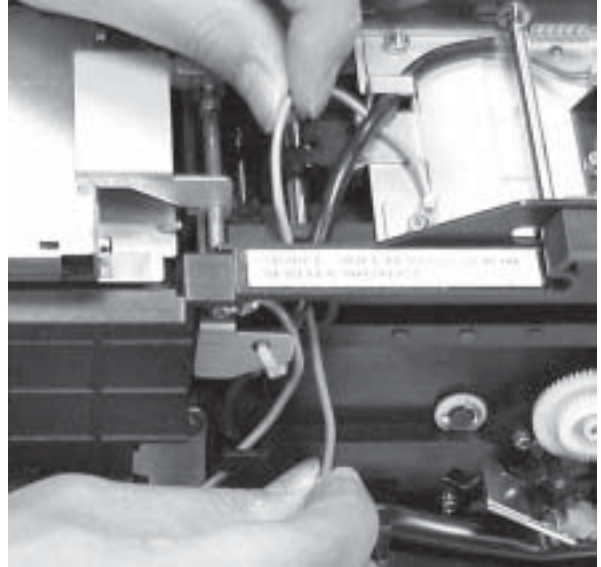


Figure Seven

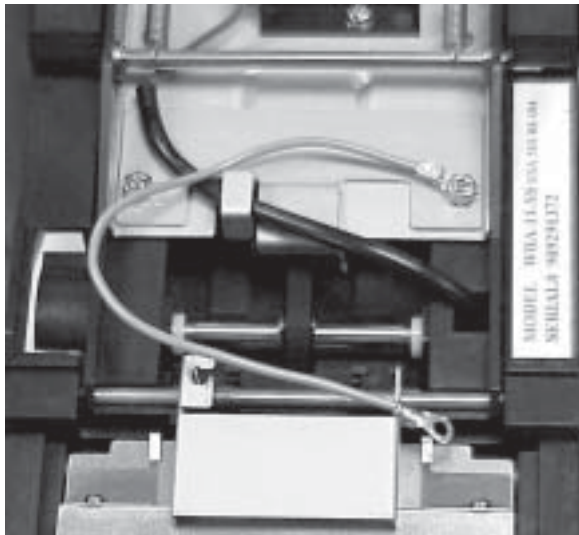


Figure Six

Step 5.

Attach one of the short ground wires (Part No. 076002) on the screw with the star washer. Secure both screws with the nuts (Part No. 014554) supplied in the kit.

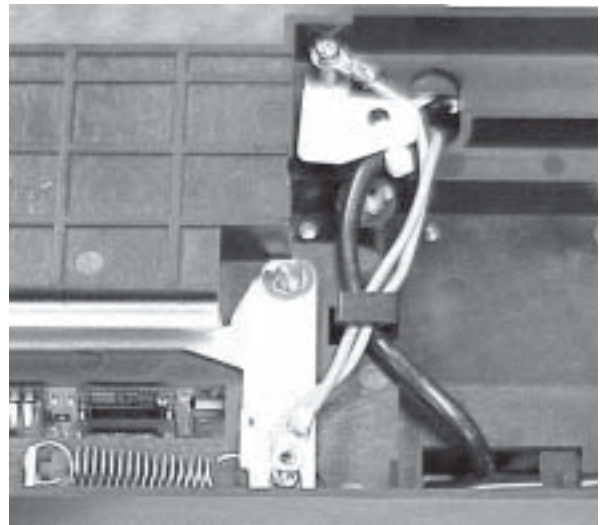


Figure Eight

Step 6.

Thread the ground wire down to the terminal on the side of the unit which already has a wire attached. Do not attach the wire yet.

WBA™ Brush Kit

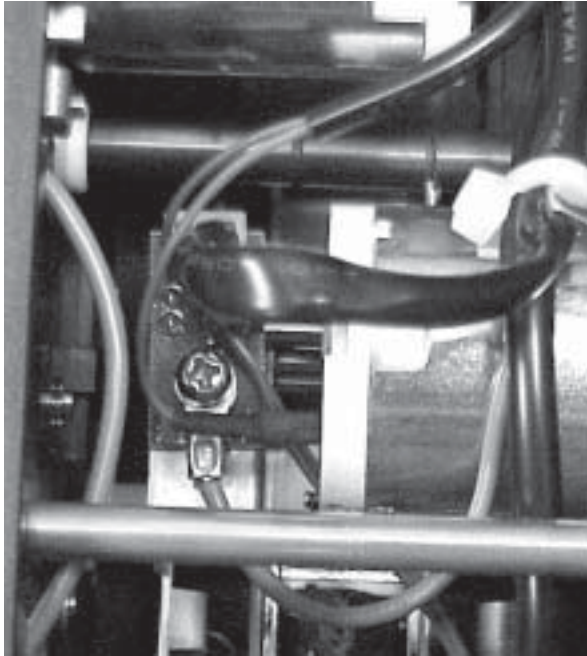


Figure Nine

Step 7.

Turn the unit over and attach the other short ground wire (Part No. 076002) to the screw securing a 3-pin connector.

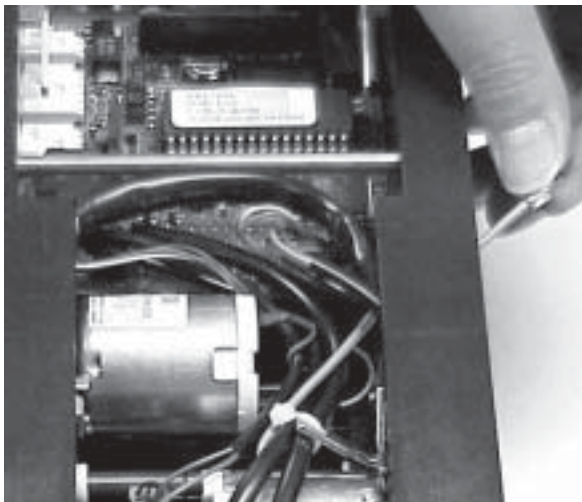


Figure Ten

Step 8.

Thread that wire out to the same terminal as the other wire in Step 6. Secure all three wires on the terminal with the long screw in the kit.

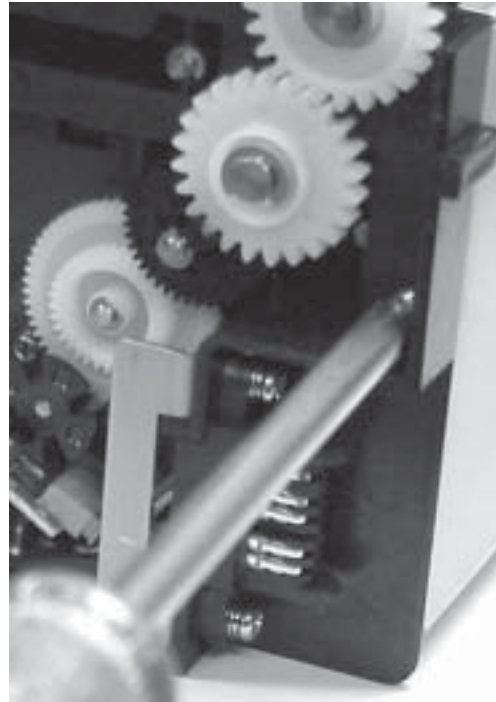


Figure Eleven

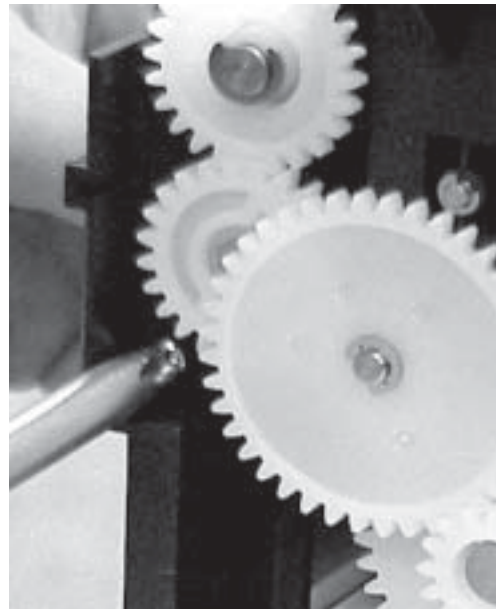


Figure Twelve

Step 9.

Remove the two screws securing the back plate (see Figures 11 and 12).

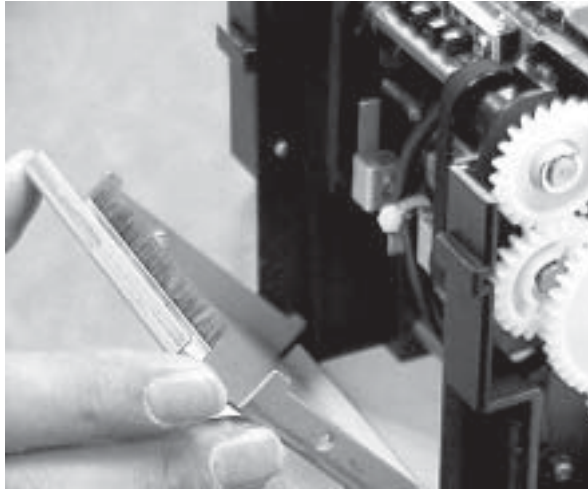


Figure Thirteen

Step 10.

Replace the back plate with the new back plate (Part No. 059512) with the brushes.

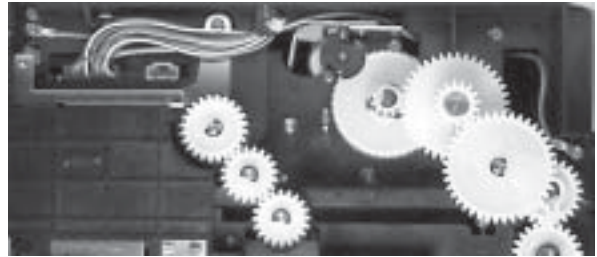


Figure Fifteen

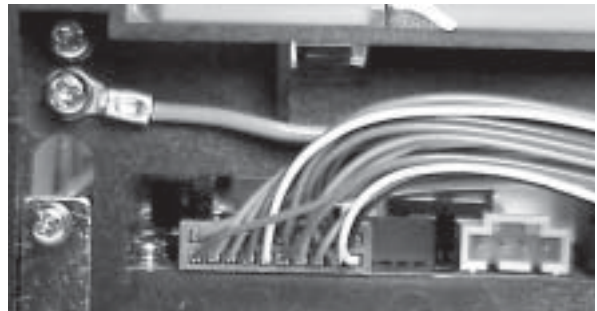


Figure Sixteen

Step 12.

Thread the wire back to the screw shown in Figure 16 and secure it.

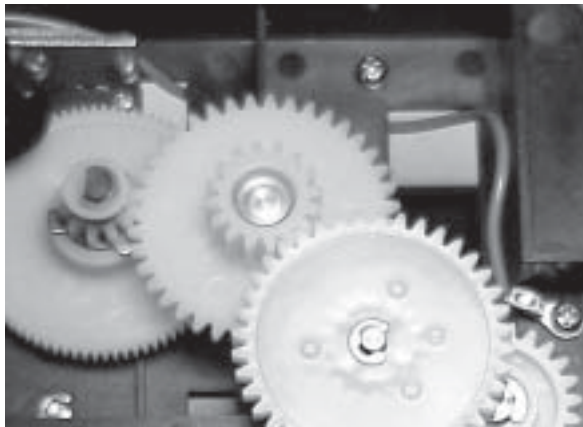


Figure Fourteen


Step 11.

Place one terminal of the long ground wire supplied in the kit (Part No. 076003) under the screw securing the back plate.

Parts List

076001	Brush Bracket
076000	Static Brush
059512	Rear Cover
075999	Static Brush
046996	Screws (2)
006037	Screw
014554	Nuts(2)
004016	Spring Washer
006371	Star Washer
076003	Gnd. Harness
076002	Gnd. Harness(2)
960-000045	Instructions

WBA™ Brush Kit

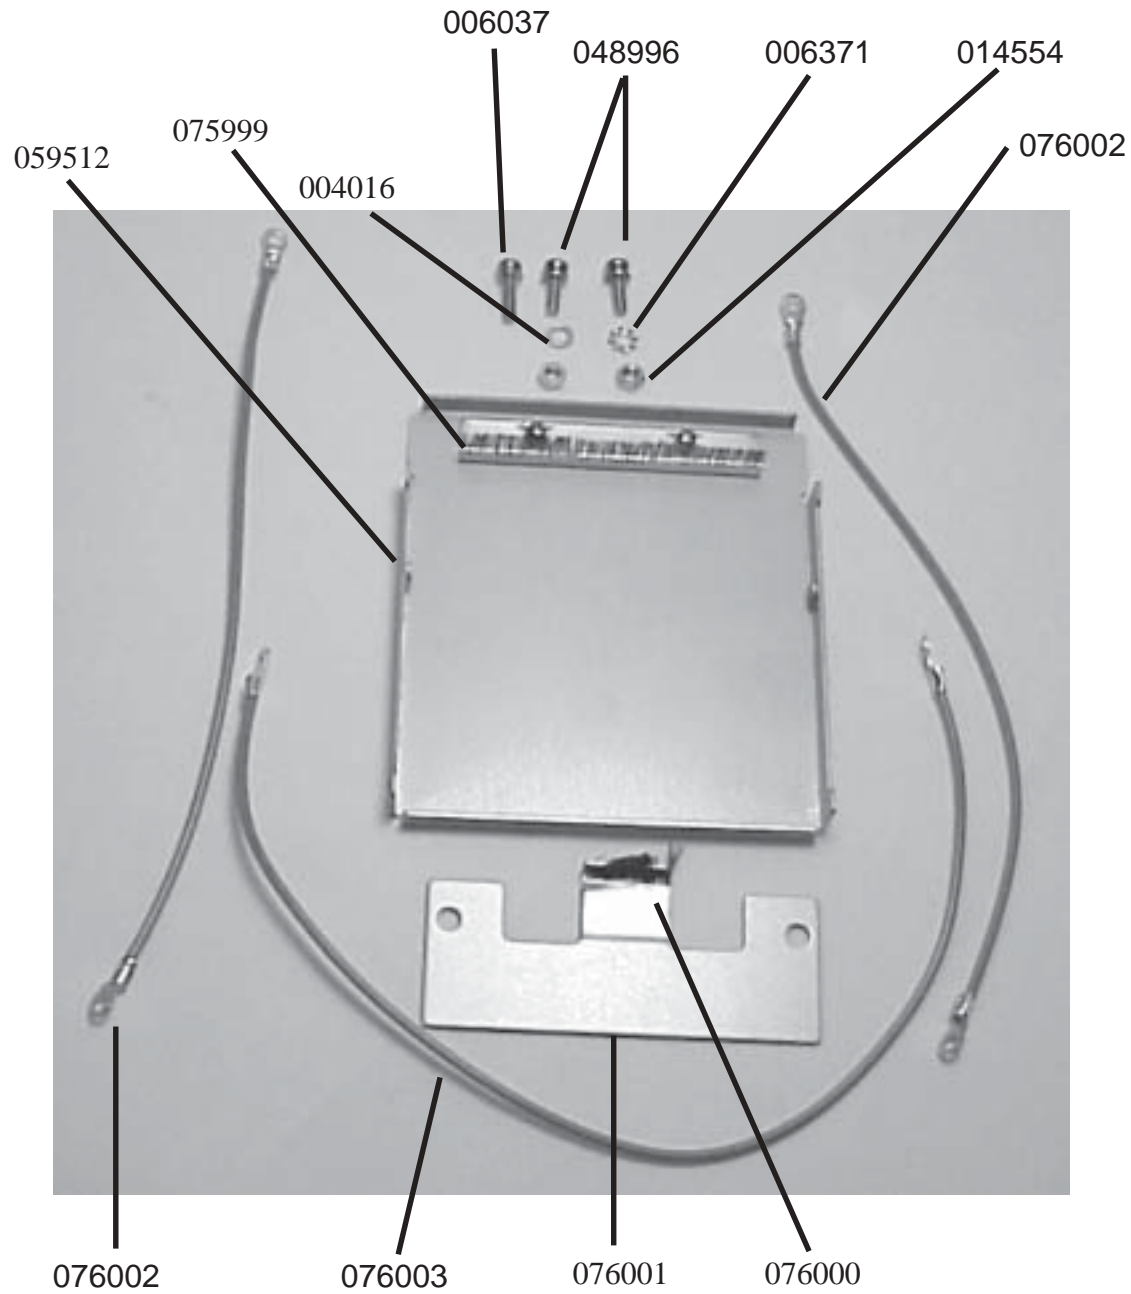

WBA Brush Kit
JCM Part No. 701-000056