

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

SR3 Type 2 MechTool Manual



This document is the copyright of Money Controls Ltd and may not be reproduced in part or in total by any means, electronic or otherwise, without the written permission of Money Controls Ltd. Money Controls Ltd does not accept liability for any errors or omissions contained within this document. Money Controls Ltd shall not incur any penalties arising out of the adherence to, interpretation of, or reliance on, this standard. Money Controls Ltd will provide full support for this product when used as described within this document. Use in applications not covered or outside the scope of this document may not be supported. Money Controls Ltd. reserves the right to amend, improve or change the product referred to within this document or the document itself at any time.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

Contents

1. Diary of Changes	3
2. MechTool™ DIL Switch Options	4
3. Accept and Inhibit Configuration	6
3.1 Inhibit Specific Coins – Method 1.....	6
3.2 Enable Specific Coins – Method 1.....	6
3.3 Inhibit Specific Coins – Method 2.....	7
3.4 Enable Specific Coins – Method 2.....	8
4. Teach and Run™	9
4.1 Programming Steps	9
4.2 BANK 1.....	10
4.3 BANK 2.....	10
4.4 Teach and Run Example	11
5. Erase All Windows	12
6. Adjust Coin Security	13
6.1 Method 1 – coin required.....	13
6.2 Method 2 – no coins required.....	14
6.3 Decrease Security	15
6.4 Increase Security.....	15
6.5 Reset Security	15
7. Alarms	16
7.1 Alarm Enable	16
7.2 Alarm Disable	16
8. Price Setting	17
8.1 Set Price 1	17
8.2 Set Price 2	17
9. Bank Select	18
9.1 Enable Banks 1 and 2.....	18
9.2 Enable Bank 1 / Disable Bank 2	18
9.3 Disable Bank 1 / Enable Bank 2	18

Tables

Table 1: DIL Switch Functions	4
Table 2: 6 way DIL Switch Functions.....	5
Table 3: Switch Position v Coin Window.....	7
Table 4: Switch Position v Coin Window.....	8
Table 5: Teach and Run™ Programming - Bank 1.....	10
Table 6: Teach and Run™ Programming (Mode 6 ONLY).....	10
Table 7: Teach and Run™ Programming - Bank 2.....	10
Table 8: DIL Switches - Decrease Security	15
Table 9: DIL Switches - Increase Security.....	15

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

1. Diary of Changes

Issue 1.0.....	October 2001
Issue 2.0.....	February 2002
➤ Applied TMWP v3.0.	
Issue 3.0.....	27 th April 2002
➤ Added DIL switch pictures.	
Issue 3.1.....	6 th Sept 2002
➤ Modification to disclaimer.	
Issue 4.0.....	2 nd January 2003
➤ Added reference to Mode 6 in heading.	
Issue 5.0.....	3 rd April 2003
➤ Added Mode 7 Price setting.	
➤ Amended Table 2 to include modes.	
➤ Added the limited Mode 6 functions.	
➤ Changed page header from Mode 6 to Mode 8.	
➤ Added Section 9 Bank Select .	
➤ Added references to Mode 10.	
➤ Amended Section 4 Teach and Run™	
Issue 5.1.....	24 th June 2003
➤ Changed the description of " Enable Bank 1 / Disable Bank 2 "	
➤ Removed Typo's in Section 9 .	
Issue 5.2.....	18 th August 2003
➤ Applied TMWP V3.2	
➤ Changed page header to include Modes 14 and 15.	
Issue 5.3.....	30 th June 2004
➤ Changed footer	
Issue 5.4.....	17 th Jan 2005
➤ Corrected the Dip-switch picture in section 9.1 .	

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

2. MechTool™ DIL Switch Options.

Warning:

Pressing the reject lever within 20 seconds of power up, with the 6 DIL switches set to OFF, will set the SR3 into standby mode, the LED will flash RED and no coins will be accepted for approx. 3 mins.

This does NOT apply to SR3 Type 2 Mode 10.

There are a number of options which can be selected via the 6 way DIL switch. The 6 way DIL switch or Program Switch Bank can be used for field programming the following:

- Enable / disable a specific coin (2 methods available)
- Adjust coin security settings (2 methods available)
- Enable / disable alarm
- **Teach and Run™**
- Erase all windows
- Set Prices (Mode 7 only)
- Enable / Disable Banks



Table 1: DIL Switch Functions

1	2	3	4	5	6
Program 1	Program 2	Program 3	Program 4	Teach on/off	Security on/off

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

Table 2: 6 way DIL Switch Functions

SW1	SW2	SW3	SW4	SW5	SW6	FUNCTION	Available in 'Modes'
off	ON	off	off	off	off	Enable Banks 1 and 2	1, 2, 4, 5, 7 & 10
off	off	ON	ON	off	off	Enable Bank 1 / Disable Bank 2	1, 2, 4, 5, 7 & 10
ON	off	ON	ON	off	off	Disable Bank 1 / Enable Bank 2	1, 2, 4, 5, 7 & 10
ON	ON	off	off	off	off	Enable Specific Coins – Method 1	1, 2, 4, 5, 7 & 10
off	off	ON	off	off	off	Enable Specific Coins – Method 2	1, 2, 4, 5, 7 & 10
ON	ON	off	ON	off	off	Inhibit Specific Coins – Method 1	1, 2, 4, 5, 7 & 10
off	ON	ON	off	off	off	Inhibit Specific Coins – Method 2	1, 2, 4, 5, 7 & 10
off	off	off	ON	off	off	Alarm Disable	1, 2, 4, 5, 7 & 10
ON	off	off	ON	off	off	Alarm Enable	1, 2, 4, 5, 7 & 10
off	ON	off	ON	off	off	Erase All Windows (Step 1)	1, 2, 4, 5, 7 & 10
ON	off	off	off	off	off	Erase All Windows (Step 2)	1, 2, 4, 5, 7 & 10
W	W	W	W	ON	off	Teach and Run™ W = window, SW1 = MSB	1, 2, 4, 5, 7 & 10
S	N	N	N	off	ON	Adjust Coin Security – Method 1 S = ON to widen, OFF to narrow. SW2 = MSB	1, 2, 4, 5, 7 & 10
S	N	N	N	ON	ON	Adjust Coin Security – Method 2 S = ON to widen, OFF to narrow. SW2 = MSB	1, 2, 4, 5, 6, 7 & 10
off	off	off	ON	ON	off	Teach and Run™ Window 1	6
off	off	ON	ON	ON	off	Teach and Run™ Window 3	6
ON	ON	ON	off	off	off	Set Price 1	7
ON	off	ON	off	off	off	Set Price 2	7

Note: SR3 Type 2 modes 3 and 8 can not use any MechTool functions.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

3. Accept and Inhibit Configuration


It is possible on the SR3 to inhibit a single coin or any combination of the 12 possible programmed coins by following one of the procedures below.

Note: If the SR3 contains the same coin twice (i.e. standard security and high security) usually in the same bank then method 1 will disable both coins. Therefore you must use method 2.

3.1 Inhibit Specific Coins – Method 1

Example:- To Inhibit 50p and 20p.

Switch off the power to the SR3.
Set the Program DIL switches to:-

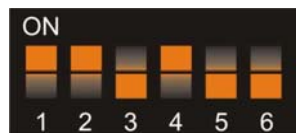


SW1	SW2	SW3	SW4	SW5	SW6
ON	ON	OFF	ON	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will turn RED.
Insert 50p and 20p and check that they are accepted.
Press the reject lever to return to normal operational mode.
The LED will turn GREEN.
Return ALL the DIL switches to the OFF position.
The inserted coin/s will now be rejected.

3.2 Enable Specific Coins – Method 1

Example:- To Enable 50p and 20p.

Switch off the power to the SR3.
Set the Program DIL switches to:-

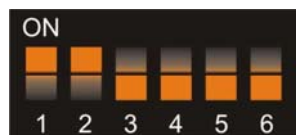

SW1	SW2	SW3	SW4	SW5	SW6
ON	ON	OFF	OFF	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will turn RED.
Insert 50p and 20p and check that they are accepted.
Press the reject lever to return to normal operational mode.
The LED will turn GREEN.
Return ALL the DIL switches to the OFF position.
The inserted coin/s will now be accepted.


Note:- It is possible for a single coin to be enabled using the above procedure even though that particular bank has been disabled.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

3.3 Inhibit Specific Coins – Method 2


Example:- To Inhibit 50p **Coin 2** and 20p **Coin 3**.

Switch off the power to the SR3.
Set the Program DIL switches to:-

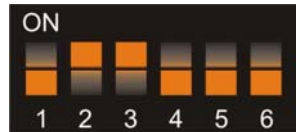


SW1	SW2	SW3	SW4	SW5	SW6
OFF	ON	ON	OFF	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. (**Mode 10 can be accessed at any time**).
The LED will turn RED.
Set the switches to the desired coin position (refer to [Table 3](#)) i.e. 2.

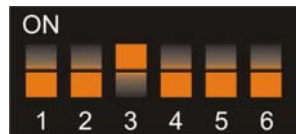

SW1	SW2	SW3	SW4	SW5	SW6	Coin No.
OFF	OFF	ON	OFF	OFF	OFF	2

Press the reject lever – LED changes colour to GREEN then back to RED.
Set the switches to the next desired coin position (refer to [Table 3](#)) i.e. 3.

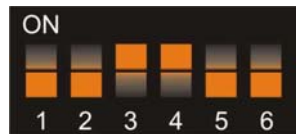

SW1	SW2	SW3	SW4	SW5	SW6	Coin No.
OFF	OFF	ON	ON	OFF	OFF	3

Press the reject lever – LED changes colour to GREEN then back to RED.
Return ALL the DIL switches to the OFF position.
Press the reject lever to return to normal operational mode.
The LED will turn GREEN.
The selected coin/s will now be rejected.

Table 3: Switch Position v Coin Window


Coin No.	SW1 MSB	SW2	SW3	SW4 LSB
1	off	off	off	ON
2	off	off	ON	off
3	off	off	ON	ON
4	off	ON	off	off
5	off	ON	off	ON
6	off	ON	ON	off
7	off	ON	ON	ON
8	ON	off	off	off
9	ON	off	off	ON
10	ON	off	ON	off
11	ON	off	ON	ON
12	ON	ON	off	off

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

3.4 Enable Specific Coins – Method 2

Example:- To Enable 50p **Coin 2** and 20p **Coin 3**.


Switch off the power to the SR3.
Set the Program DIL switches to:-

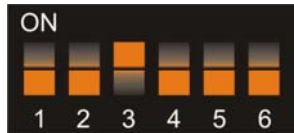

SW1	SW2	SW3	SW4	SW5	SW6
OFF	OFF	ON	OFF	OFF	OFF


Switch on the power to the SR3.
Press the reject lever within 20 seconds. (**Mode 10 can be accessed at any time**).
The LED will turn RED.

Set the switches to the desired coin position (refer to [Table 4](#)) i.e. 2.

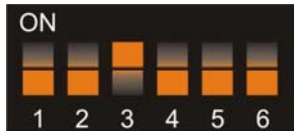

SW1	SW2	SW3	SW4	SW5	SW6	Coin No.
OFF	OFF	ON	OFF	OFF	OFF	2

Press the reject lever – LED changes colour to GREEN then back to RED.
Set the switches to the next desired coin position (refer to [Table 4](#)) i.e. 3.

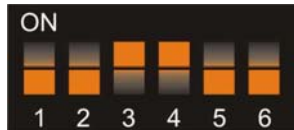

SW1	SW2	SW3	SW4	SW5	SW6	Coin No.
OFF	OFF	ON	ON	OFF	OFF	3

Press the reject lever – LED changes colour to GREEN then back to RED.

Return ALL the DIL switches to the OFF position.

Press the reject lever to return to normal operational mode.

The LED will turn GREEN.

The selected coin/s will now be accepted.

Table 4: Switch Position v Coin Window

Coin No.	SW1 MSB	SW2	SW3	SW4 LSB
1	off	off	off	ON
2	off	off	ON	off
3	off	off	ON	ON
4	off	ON	off	off
5	off	ON	off	ON
6	off	ON	ON	off
7	off	ON	ON	ON
8	ON	off	off	off
9	ON	off	off	ON
10	ON	off	ON	off
11	ON	off	ON	ON
12	ON	ON	off	off

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

4. Teach and Run™

The SR3 can have the option to enable **Teach & Run™** on all 12 coins. This option is selected at the time of order. The specific coin channel to be programmed is selected using switch 1 (MSB) to switch 4 (LSB) on the 6 way DIL switch.

4.1 Programming Steps

To programme a coin/token please follow these 6 Steps:

1. Switch off the power to the SR3.
2. Set the 6 way DIL switch to the relevant coin to be programmed.
(see [Table 5](#) and [Table 7, Mode 6 see Table 6](#)).
3. Switch on the power to the SR3.
4. Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will turn RED.
5. Start entering the coins¹ or tokens¹ you wish to teach until the LED flashes GREEN, typically after 8 to 10 insertions².

If the LED turns GREEN after the 1st coin is inserted, then Teach & Run is DISABLED.

6. Press the reject lever and the LED will return to constant GREEN.

The coin channel is now programmed³.

To programme further coin channels, repeat from step 1.

Once you have finished programming return all switches to the OFF position.

The first coin inserted after **Teach & Run™** may reject. Subsequent coins should accept.

Notes:

- ¹ If a large sample of coins/tokens are used, then the coin channel sensor windows will be more accurate and a higher acceptance of true coins/tokens should be seen. If only a single coin/token is used, coin channel sensor windows will be programmed which may not truly reflect the coin/token population.
- ² If significantly more than 10 coins have been inserted and the LED is still not changing to GREEN, this could be caused by three possible reasons.
 - a) The coins/tokens being used are actually 2 different types although they look the same e.g. 1p old and 1p new.
 - b) The coins/tokens being used are poorly manufactured/minted to such an extent that the **Teach & Run™** is unable to correlate the readings taken.
 - c) The SR3 has a fault.
- ³ Even though a coin/token has been programmed make sure that the coin channel has actually been enabled (see section [3](#)).
Teach & Run™ does NOT automatically enable the taught coin/token.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

4.2 BANK 1

Table 5: Teach and Run™ Programming - Bank 1

Coin Number	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6
1	off	off	off	ON	ON	off
2	off	off	ON	off	ON	off
3	off	off	ON	ON	ON	off
4	off	ON	off	off	ON	off
5	off	ON	off	ON	ON	off
6	off	ON	ON	off	ON	off

Table 6: Teach and Run™ Programming (Mode 6 ONLY)

Coin Number	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6
1	off	off	off	ON	ON	off
3	off	off	ON	ON	ON	off

4.3 BANK 2

Table 7: Teach and Run™ Programming - Bank 2


Coin Number	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5	Switch 6
7	off	ON	ON	ON	ON	off
8	ON	off	off	off	ON	off
9	ON	off	off	ON	ON	off
10	ON	off	ON	off	ON	off
11	ON	off	ON	ON	ON	off
12	ON	ON	off	off	ON	off

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

4.4 Teach and Run Example

Example:- To teach coin channel 12 for £1

Switch off the power to the SR3.
Set the Program DIL switches to:-

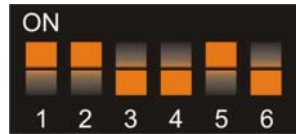

MSB SW1	SW2	SW3	LSB SW4	Total	SW5	SW6
ON	ON	OFF	OFF	12	ON	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will turn RED.
Start entering £1 coins until the LED flashes GREEN, typically after 8 to 10 insertions.

If the LED turns GREEN after the 1st coin is inserted, then Teach & Run is DISABLED.

Press the reject lever and the LED will turn GREEN.
The coin channel has been programmed.

Set ALL switches to the OFF position.

Note: if a fault condition occurs (flashing RED), either power off, power on and restart teaching or press the reject lever, this will exit Teach and Run™, the LED will change colour from flashing RED to GREEN.


This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

5. Erase All Windows

This function allows you to erase all the windows previously programmed, whether they were programmed by **Teach and Run™**, programmed using a programming device or programmed by Money Controls Ltd.


Because of the severity of this procedure, two steps are required, which reduces the risk of this being done accidentally.

Switch off the power to the SR3.
Set the Program DIL switches to:-

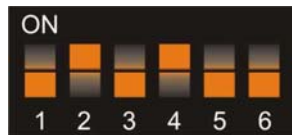

SW1	SW2	SW3	SW4	SW5	SW6
OFF	ON	OFF	ON	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will flash RED / GREEN.
Set the Program DIL switches to:-

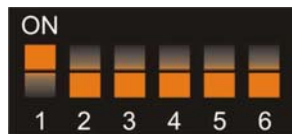

SW1	SW2	SW3	SW4	SW5	SW6
ON	OFF	OFF	OFF	OFF	OFF

Press the reject lever again.
The LED will flash GREEN.
Set ALL the DIL switches to the OFF position.
Press the reject lever to return to operational mode.
LED will change to constant GREEN.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

6. Adjust Coin Security

The security of an individual coin/token can be adjusted using the 6 way DIL switches. Two methods are available on the SR3 Type 2.


Switch 1	Allows sensor windows to be increased or decreased. (ON = increase windows / decrease security, OFF = decrease windows / increase security)
Switches 2, 3, 4	Determines the number of counts to be added or removed from the sensor windows (SW2 = MSB, SW4 = LSB). See Table 8 and Table 9 below.
Switch 5	Not used for adjusting coin security settings = OFF.
Switch 6	Enables coin security mode = ON.

6.1 Method 1 – coin required

Example:- To increase the sensor windows / decrease the security on a £1 coin⁴ by 2 counts^{5,6} the following procedure should be followed:

Switch off the power to the SR3.

Set the 6 way DIL switches to:- (widen, 2 counts, security)

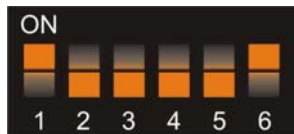

SW1	SW2	SW3	SW4	SW5	SW6
ON	OFF	ON	OFF	OFF	ON

Switch on the power to the SR3.

Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**

Check the LED turns RED.

Insert a £1 coin and check it accepts.

The LED should now turn GREEN.

Set ALL the switches to the OFF position.

Press the reject lever again to return to operational mode.

The security has now been saved to EEPROM.

Notes:

- ⁴ The coin channel must be ENABLED for changes to be programmed.
- ⁵ +n counts will add n counts to the upper limits of the sensor windows and subtract n counts from the lower limits of the sensor windows for the coin channel selected. i.e. +2 counts will actually make the sensor windows a total of 4 counts wider on the coin channel selected.
-n counts will subtract n counts from the upper limits of the sensor windows and add n counts to the bottom limits of the sensor windows for the coin channel selected. i.e. +3 counts will actually make the sensor windows a total of 6 counts narrower on the coin channel selected.
- ⁶ If 2 counts were not enough and 3 counts were actually required, the procedure has to be repeated for +3 counts (NOT an extra +1 count).


This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

6.2 Method 2 – no coins required.

Example:- To increase the sensor windows / decrease the security on a £1 coin⁷ (window 1) by 2 counts^{8,9} the following procedure should be followed:

Switch off the power to the SR3.

Set the 6 way DIL switches to:- (widen, 2 counts, **Teach and Run™**, security)

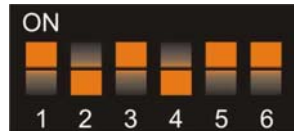


SW1	SW2	SW3	SW4	SW5	SW6
ON	OFF	ON	OFF	ON	ON

Switch on the power to the SR3.

Press the reject lever within 20 seconds. (**Mode 10 can be accessed at any time**).

Check the LED turns RED.

Set the 6 way DIL switches to:- (window 1)(see [Table 4](#))

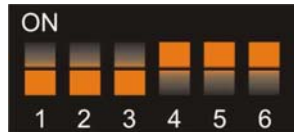

SW1	SW2	SW3	SW4	SW5	SW6
OFF	OFF	OFF	ON	ON	ON

Press the reject lever again.

The LED will now turn RED then GREEN.

The security has now been saved to EEPROM.

Set ALL the switches to the OFF position.

Press the reject lever to return to operational mode.

LED will change to constant GREEN.

Notes:-

- ⁷ The coin channel must be ENABLED for changes to be programmed.
- ⁸ +n counts will add n counts to the upper limits of the sensor windows and subtract n counts from the lower limits of the sensor windows for the coin channel selected. i.e. +2 counts will actually make the sensor windows a total of 4 counts wider on the coin channel selected.
-n counts will subtract n counts from the upper limits of the sensor windows and add n counts to the bottom limits of the sensor windows for the coin channel selected. i.e. +3 counts will actually make the sensor windows a total of 6 counts narrower on the coin channel selected.
- ⁹ If 2 counts were not enough and 3 counts were actually required, the procedure has to be repeated for +3 counts (NOT an extra +1 count).

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

6.3 Decrease Security

Table 8: DIL Switches - Decrease Security

Value	SW1	SW2	SW3	SW4	SW5	SW6
0	ON	off	off	off	off	ON
+1	ON	off	off	ON	off	ON
+2	ON	off	ON	off	off	ON
+3	ON	off	ON	ON	off	ON
+4	ON	ON	off	off	off	ON
+5	ON	ON	off	ON	off	ON
+6	ON	ON	ON	off	off	ON
+7	ON	ON	ON	ON	off	ON

6.4 Increase Security

Table 9: DIL Switches - Increase Security

Value	SW1	SW2	SW3	SW4	SW5	SW6
0	off	off	off	off	off	ON
-1	off	off	off	ON	off	ON
-2	off	off	ON	off	off	ON
-3	off	off	ON	ON	off	ON
-4	off	ON	off	off	off	ON
-5	off	ON	off	ON	off	ON
-6	off	ON	ON	off	off	ON
-7	off	ON	ON	ON	off	ON

6.5 Reset Security

Set the DIL switches to either Increase Security 0 or Decrease Security 0. This will set the sensor windows tweak value to 0 for the coin channel selected, i.e. the original programmed sensor windows.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

7. Alarms

When enabled, an alarm condition will activate all the outputs (A1 to A6) for 100ms, except for condition iii and iv.


Conditions which will indicate an alarm condition include:

- i. An event which occurs out of sequence.
- ii. A sequence of events occur which indicate a 'Coin-on-string' fraud is being attempted. There are a number of events that might lead to this condition.
- iii. If the credit / reject sensor is blocked for more than 1.5 seconds, the alarm signal will remain active, for the duration of the blockage.
- iv. During power-up diagnostics – if enabled – for the duration of the fault.

7.1 Alarm Enable

To enable an alarm the following steps should be followed:

Switch off the power to the SR3.

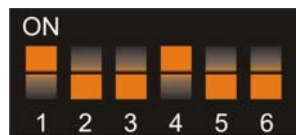

SW1	SW2	SW3	SW4	SW5	SW6
ON	OFF	OFF	ON	OFF	OFF

Switch on the power to the SR3.

Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**

The LED will flash GREEN.

Switch off the power to the SR3.

Set ALL the DIL switches to the OFF position.


Switch on the power to the SR3.

The alarm is now ON.

7.2 Alarm Disable

To disable an alarm the following steps should be followed:

Switch off the power to the SR3.

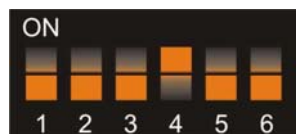

SW1	SW2	SW3	SW4	SW5	SW6
OFF	OFF	OFF	ON	OFF	OFF

Switch on the power to the SR3.

Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**

The LED will flash GREEN.

Switch off the power to the SR3.

Set ALL the DIL switches to the OFF position.

Switch on the power to the SR3.

The alarm is now OFF.


This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

8. Price Setting

8.1 Set Price 1

Example:- To set Price 1 to € 0.70.

Switch off the power to the SR3.
Set the 6 way DIL switches to:- (Price 1)

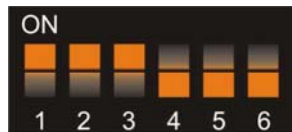


SW1	SW2	SW3	SW4	SW5	SW6
ON	ON	ON	OFF	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds.
Check the LED turns RED.
Insert a € 0.50 and a € 0.20 coin (total € 0.70) and ensure they accept.
Set ALL the switches to the OFF position.
Press the reject lever again to return to operational mode, LED = GREEN.
Price 1 has now been saved to EEPROM.

8.2 Set Price 2

Example:- To set Price 2 to € 1.10.

Switch off the power to the SR3.
Set the 6 way DIL switches to:- (Price 2)

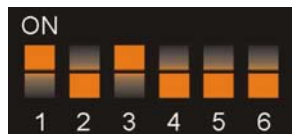

SW1	SW2	SW3	SW4	SW5	SW6
ON	OFF	ON	OFF	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds.
Check the LED turns RED.
Insert a € 1.00 and a € 0.10 coin (total € 1.10) and ensure they accept.
Set ALL the switches to the OFF position.
Press the reject lever again to return to operational mode, LED = GREEN.
Price 2 has now been saved to EEPROM.


Note:- To set Price 1 or Price 2 to 0 (Free Sales Mode), don't enter any coins.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

9. Bank Select

9.1 Enable Banks 1 and 2

Switch off the power to the SR3.
Set the switches as shown below.

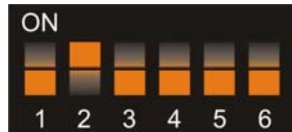


SW1	SW2	SW3	SW4	SW5	SW6
OFF	ON	OFF	OFF	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will flash GREEN.
Switch off the power to the SR3.
Set ALL the DIL switches to the OFF position.
Switch on the power to the SR3.
Both banks are now Enabled.

9.2 Enable Bank 1 / Disable Bank 2

Firstly follow the steps as shown in [9.1 Enable Banks 1 and 2](#).
Switch off the power to the SR3.
Set the switches as shown below.

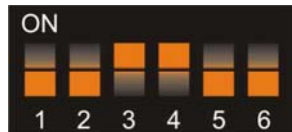

SW1	SW2	SW3	SW4	SW5	SW6
OFF	OFF	ON	ON	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will flash GREEN.
Switch off the power to the SR3.
Set ALL the DIL switches to the OFF position.
Switch on the power to the SR3.
The changes are now stored in Eeprom.

9.3 Disable Bank 1 / Enable Bank 2

Switch off the power to the SR3.
Set the switches as shown below.



SW1	SW2	SW3	SW4	SW5	SW6
ON	OFF	ON	ON	OFF	OFF

Switch on the power to the SR3.
Press the reject lever within 20 seconds. **(Mode 10 can be accessed at any time).**
The LED will flash GREEN.
Switch off the power to the SR3.
Set ALL the DIL switches to the OFF position.
Switch on the power to the SR3.
The changes are now stored in Eeprom.

This Manual is NOT for use on SR3 Type 2 Modes 3, 8, 14 & 15

This manual is intended only to assist the reader in the use of this product and therefore Money Controls shall not be liable for any loss or damage whatsoever arising from the use of any information or particulars in, or any incorrect use of the product. Money Controls reserve the right to change product specifications on any item without prior notice