

WMS GAMING GAMESMAN side payout AC HOPPER Technical Manual Appendix



This document is the copyright of Money Controls Ltd and may not be reproduced in part or in total by any means, electronic or otherwise, without the written permission of Money Controls Ltd. Money Controls Ltd does not accept liability for any errors or omissions contained within this document. Money Controls Ltd shall not incur any penalties arising out of the adherence to, interpretation of, or reliance on, this standard. Money Controls Ltd will provide full support for this product when used as described within this document. Use in applications not covered or outside the scope of this document may not be supported. Money Controls Ltd. reserves the right to amend, improve or change the product referred to within this document or the document itself at any time.

Contents

1. Diary of Changes	3
2. Introduction	4
3. Control Board Operation	5
3.1 Motor on/off control	5
3.2 Coin jam detection and clearing	5
3.3 Coin counting	5
3.4 Opto sensor security	5
4. Electrical Specification	7
4.1 Power requirements	7
4.2 Input/output signals	7
4.21 Motor On.....	7
4.22 Count Output	7
4.3 Timings.....	7
5. Connector Details	8
5.1 Connector Type.....	8
5.2 Pin-outs.....	8
6. WMS Bowl Capacities	8
7. Service / Maintenance	9
8. Exploded Drawings	11
9. Overall Dimensions	14
10. Spare Parts	15
Appendix 1 (Fitting the Bridge Plate)	16

Figures

Figure 1: Timing Diagram	6
Figure 2: Torque Settings	10
Figure 3: Exploded Drawing – Bowl and disk assembly	11
Figure 4: Exploded Drawing – Motor, frame and base assembly	12
Figure 5: Overall Dimensions	14

Tables

Table 1: Pin-outs	8
Table 2: WMS Bowl Capacities	8
Table 3: Recommended Spare Parts	15

1. Diary of Changes

Issue 2.1	5 th March 2002
➤ Applied TMWP V3.0.	
➤ Added Diary Of Changes.	
➤ Added last page disclaimer.	
Issue 2.2	21 st March 2002
➤ Bowl capacities added.	
Issue 3.0	14 th April 2002
➤ Timing diagram added.	
➤ Timings explained.	
Issue 3.1	6 th Sept 2002
➤ Modification to disclaimer.	
Issue 4.0	17 th Sept 2003
➤ Service / Maintenance section added.	
➤ AC added to title.	
➤ Added Figure 2 , Figure 3 and Figure 4 .	
➤ 24V DC reference removed from section 3.1 .	
➤ Applied TMWP 3.2	
Issue 4.1	23 rd Sept 2003
➤ Modified Figure 5 .	
➤ Modified section 7 (vii)	
Issue 4.2	24 th Oct 2003
➤ Ammended section 3.2 .	
Issue 4.3	20 th February 2004
➤ Updated the error generation timings Figure 1 .	
➤ Added 16, 17 & 18 to Figure 3 .	
Issue 4.4	10 th March 2004
➤ Added version 3 software details to section 3.2 .	
Issue 4.5	30 th June 2004
➤ Changed footer	
Issue 4.6	26 th January 2005
➤ Added section 10 Spare Parts .	
➤ Added component part numbers after Figure 4 .	
➤ Ammended section 3.2 re V3.0 s/w.	
Issue 4.7	19 th August 2005
➤ Added Appendix 1 (Fitting the Bridge Plate) .	

2. Introduction

This appendix is intended for the use with a WMS Gaming machine and a Money Controls AC Gamesman side payout ONLY.

3. Control Board Operation

The control board performs all the functions required by a host WMS Gaming machine for correct payout of coins. There are four tasks, which the board must accomplish:-

3.1 Motor on/off control

The supply voltage can be permanently connected to the hopper but the motor will not run until the "MOTOR ON" signal is activated from the host. When "MOTOR ON" is switched to 0 Volts, the control board will activate the motor H-bridge to drive the motor in a forward direction.

When "MOTOR ON" is switched off, the H-bridge will be switched into its braked condition; i.e. both motor terminals are connected to 0 Volts. This will discharge the stored energy in the motor and ensure that the motor stops in the shortest time possible.

3.2 Coin jam detection and clearing

The control board monitors the current being drawn by the motor while it is running. A coin jam will cause a significant increase in motor current. If such an event occurs, the hopper sends a jam signal to the host machine (see [Figure 1](#)). The motor will then be braked for a short time, run in the reverse direction for a fixed period, then braked again before resuming running in the forward direction. If the jam fails to clear, the motor will continue to run forwards and backwards either, for 5.5 seconds (version 2 software), or 15 reverse cycles, (version 3 software).

NB: There is a label on the processor which identifies the issue of software:

Version 1 = PRG/059-1

Version 2 = PRG/059-2

Version 3 = PRG/059-3

3.3 Coin counting

An optical sensor is used to detect coins as they leave the hopper. An LED generates a light beam across the coin exit path. The light is detected by a phototransistor. The coin counting circuit monitors the phototransistor and activates the signal "COUNT OUTPUT", whenever the light beam is blocked by a coin. In normal operation, the software, in the processor, creates a fixed duration pulse (see section 4.3 "Output pulse width"), regardless of the actual time that the coin blocks the light path.


The output signal is generated via an open-collector transistor and is active high, i.e. normally the transistor is switched on, and the output is at 0 Volts. The transistor will switch off for the duration of a coin pulse, allowing the output to be pulled up by the host machine to any voltage up to a maximum of 30 Volts DC.

3.4 Opto sensor security

The microprocessor performs two checks on the opto sensors in order to check that coins are being counted correctly. The LED is turned off for a short period, before the motor is set running, and the phototransistor is monitored for a corresponding change in state. The motor will not be started if the correct response is not received. This test is also performed periodically during a coin payout operation.

Also an extra COUNT OUTPUT signal will be generated, with a duration of at least 200ms, to indicate to the host machine that an error has occurred. The time that a coin blocks the opto is measured and if the opto should remain blocked for more than a pre-defined maximum period (see section 4.3 "Max. Opto blocked time"), the motor will be stopped. The error signal will be removed when the blockage/error is cleared and the motor will be re-started providing the "MOTOR ON" signal is still active.

Figure 1: Timing Diagram

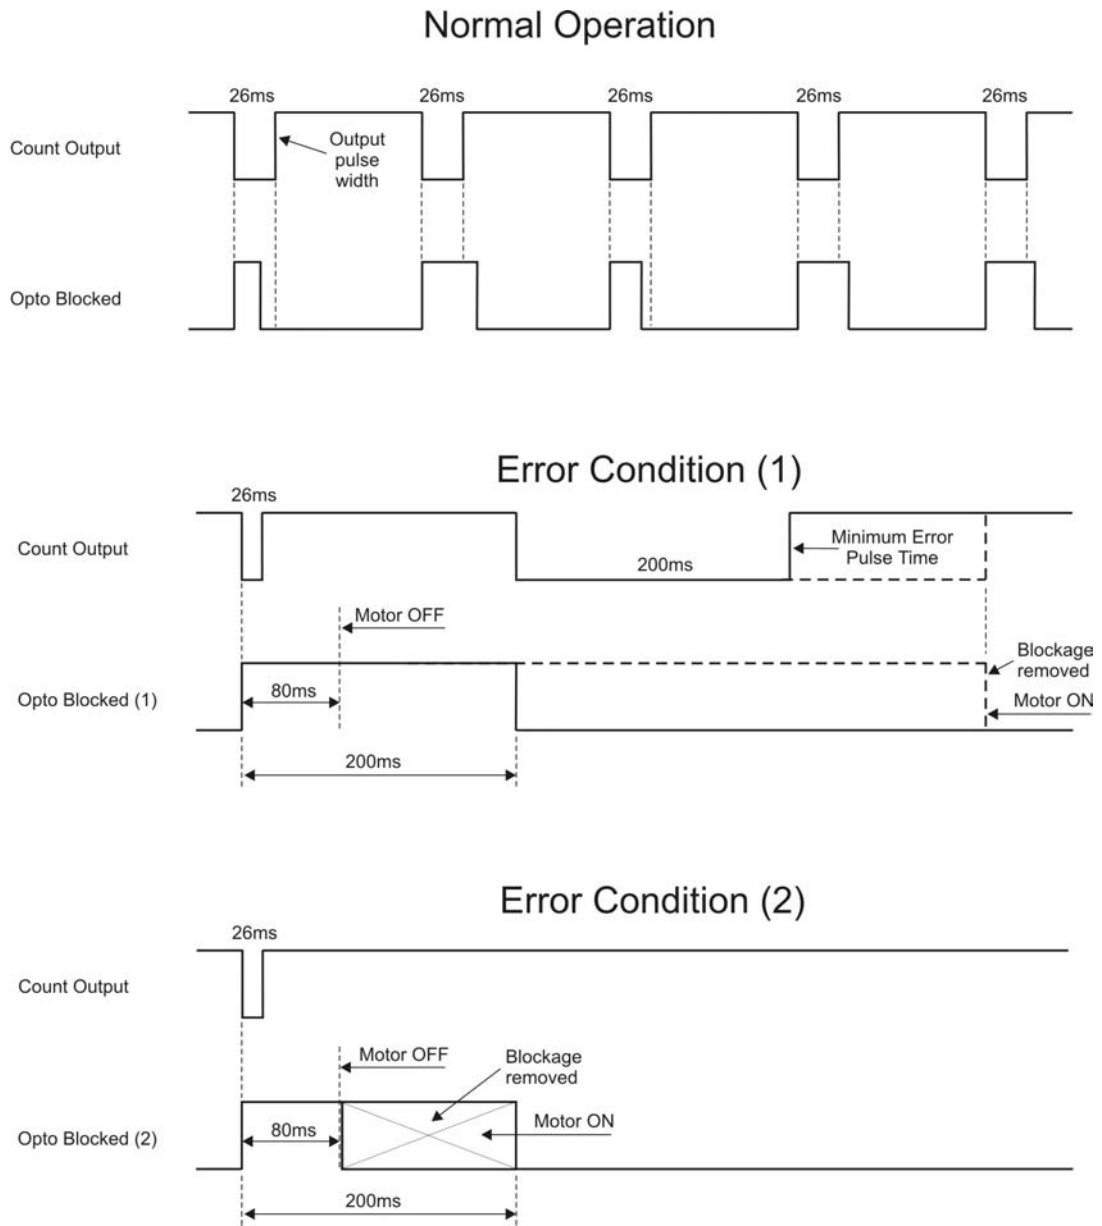

4. Electrical Specification

4.1 Power requirements

AC input voltage	110 Volts AC +/- 10%
Current	1.0 Amp peak – motor start/reverse @ 110V 0.25 Amp nominal – motor running

4.2 Input/output signals

4.21 MOTOR ON

Can be driven from an open collector transistor.

Motor On	< 1.0 Volts DC @ 0.5 mA
Motor Off	> 4.0 Volts DC

4.22 COUNT OUTPUT

NPN open collector transistor

No coin	< 0.6 Volts DC @ 50 mA maximum
Coin present	30 Volts DC maximum

4.3 Timings

Reversing time	300 ms – typical
Braking time	50 ms – typical (during reverse)
Output pulse width	26 ms, +/- 2 ms
Max. Opto blocked time	80 ms – typical
Min. error pulse time	200 ms
Max. error pulse time	As long as error condition is true

5. Connector Details

5.1 Connector Type

25 way AMP Metrimate – part No. 211149-1, plus crimps 066180-1 and 164161-3

5.2 Pin-outs

Table 1: Pin-outs

Pin No.	Signal
1	Hopper Full
4	MOTOR ON
6	120V AC Hot
7	Count Output
15	Earth
20	120V AC Neutral
25	0V DC

6. WMS Bowl Capacities

Table 2: WMS Bowl Capacities

Coin	Capacity
U.S. 5c coin	3,700
U.S. 25c coin	3,000
U.S. 50c coin	1,500
\$1 Token	850

7. Service / Maintenance

Clean the optical sensor every 100,000 coins/tokens.

Under NO circumstances, should any solvent or foam type cleaner be used.

Under NO circumstances, should any lubrication be used.

Procedure:-

- i. Disconnect the level sense wires from the bowl, if fitted;

Note: Make a note of the size and positions of the coloured spacers.

- ii. Unscrew the top 2 x M6¹ shoulder screws, which hold the bowl in place.
- iii. Lift the bowl until it is clear of the bottom 2 screws and remove it from the hopper.
- iv. Disconnect the opto loom (item 32 [Figure 3](#)) from the control PCB.
- v. Remove the 2 x M6² screws, which hold the bridge plate³ in place.
- vi. Lift the bridge clear of the disk.
- vii. Using a soft brush, remove any dirt from the opto reflector in the waffle plate and from the opto shields in the bridge plate.
- viii. Re-assemble the bridge plate, **SEE** [Appendix 1 \(Fitting the Bridge Plate\)](#).
- ix. Re-assemble the opto loom, bowl and level sensors, making sure that the bowl spacers are replaced in the original positions as shown on the bowl label (item 38 [Figure 3](#)). Ensure that the screws are tightened to the correct torque's (where specified) see [Figure 2](#).


¹. See Figure 3– screws 12 and 30.

². See Figure 3– screws 9 and 7.

³. See Figure 3 – Bridge Plate assembly – item 6.

Figure 2: Torque Settings

REF No	TORQUE IN N-M	TORQUE IN FT-LBS
A	4 N-M	2.95 FT-LBS
B	4 N-M	2.95 FT-LBS
C	1 N-M	0.74 FT-LBS

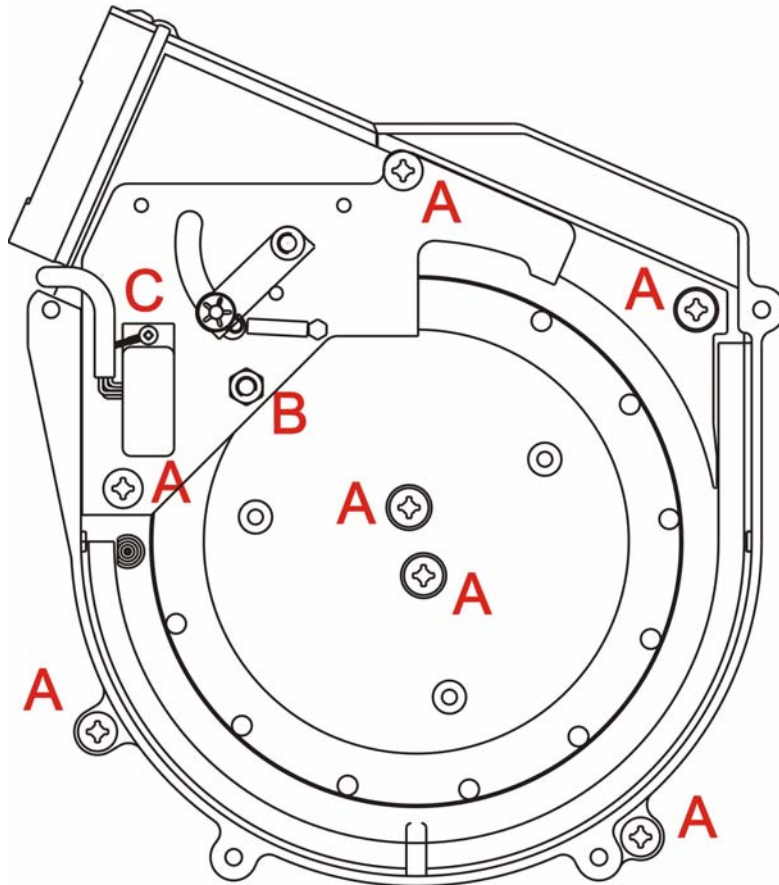**NOTE:**

- 1] YOKE AND BOWL RIVETED TOGETHER
- 2] FRAMES TO BASEPLATE RIVETED
- 3] HANDLE TO FRAME RIVETED
- 4] ON HOPPERS THAT HAVE THE FRAMES BOLTED TOGETHER THEN TORQUE AS REF A

8. Exploded Drawings

Figure 3: Exploded Drawing – Bowl and disk assembly


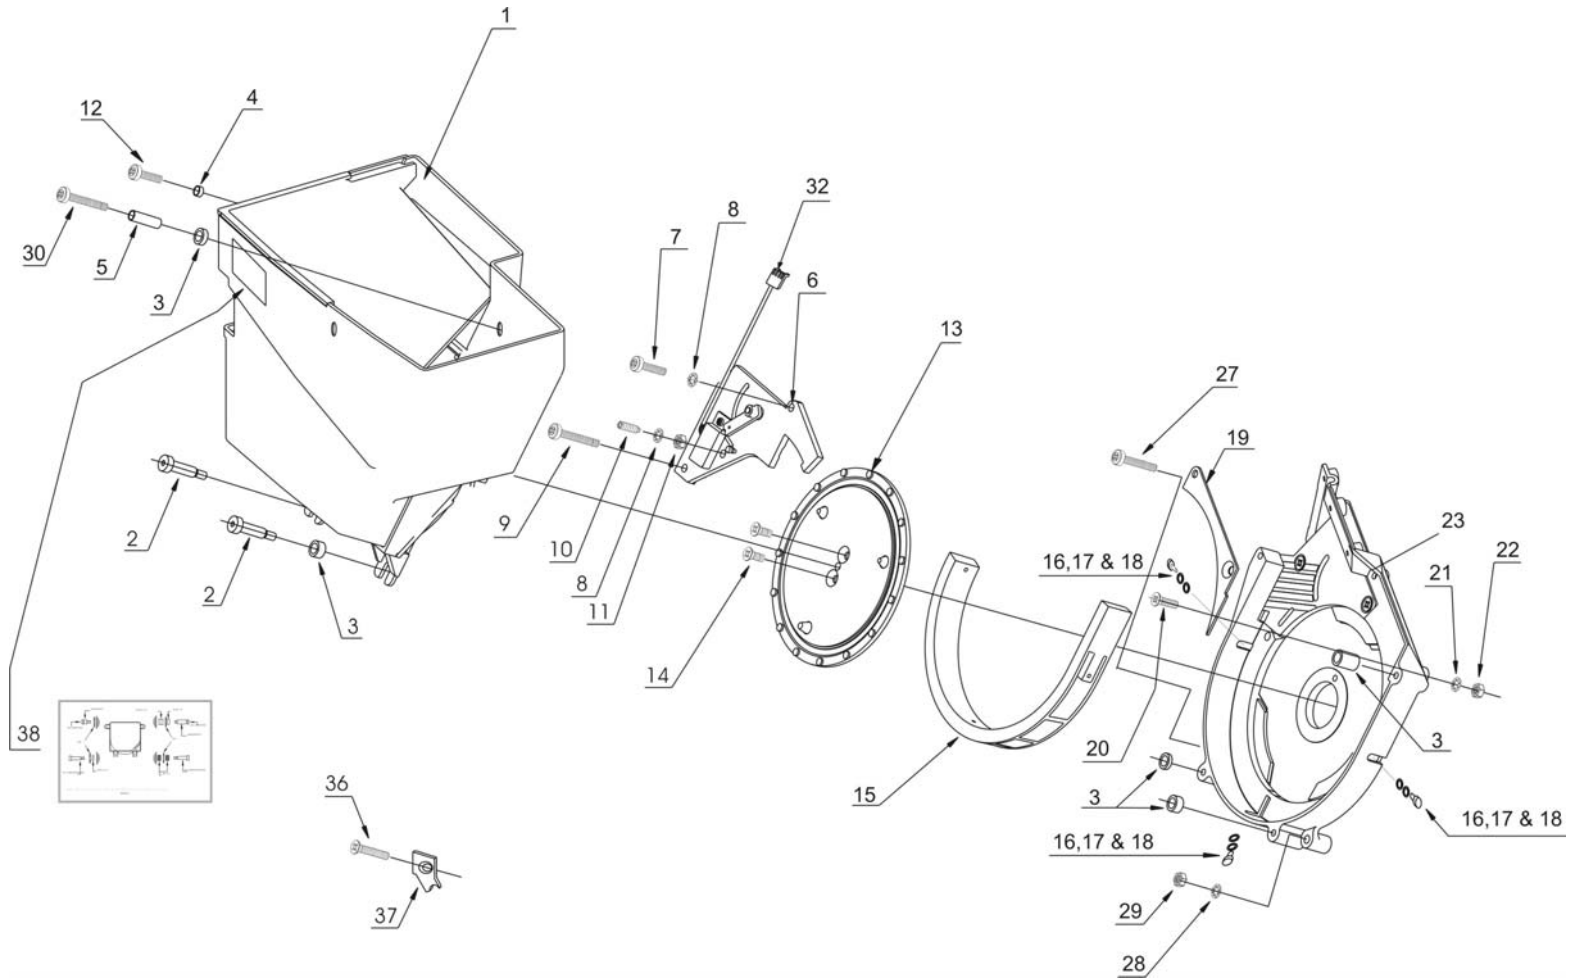



Figure 4: Exploded Drawing – Motor, frame and base assembly

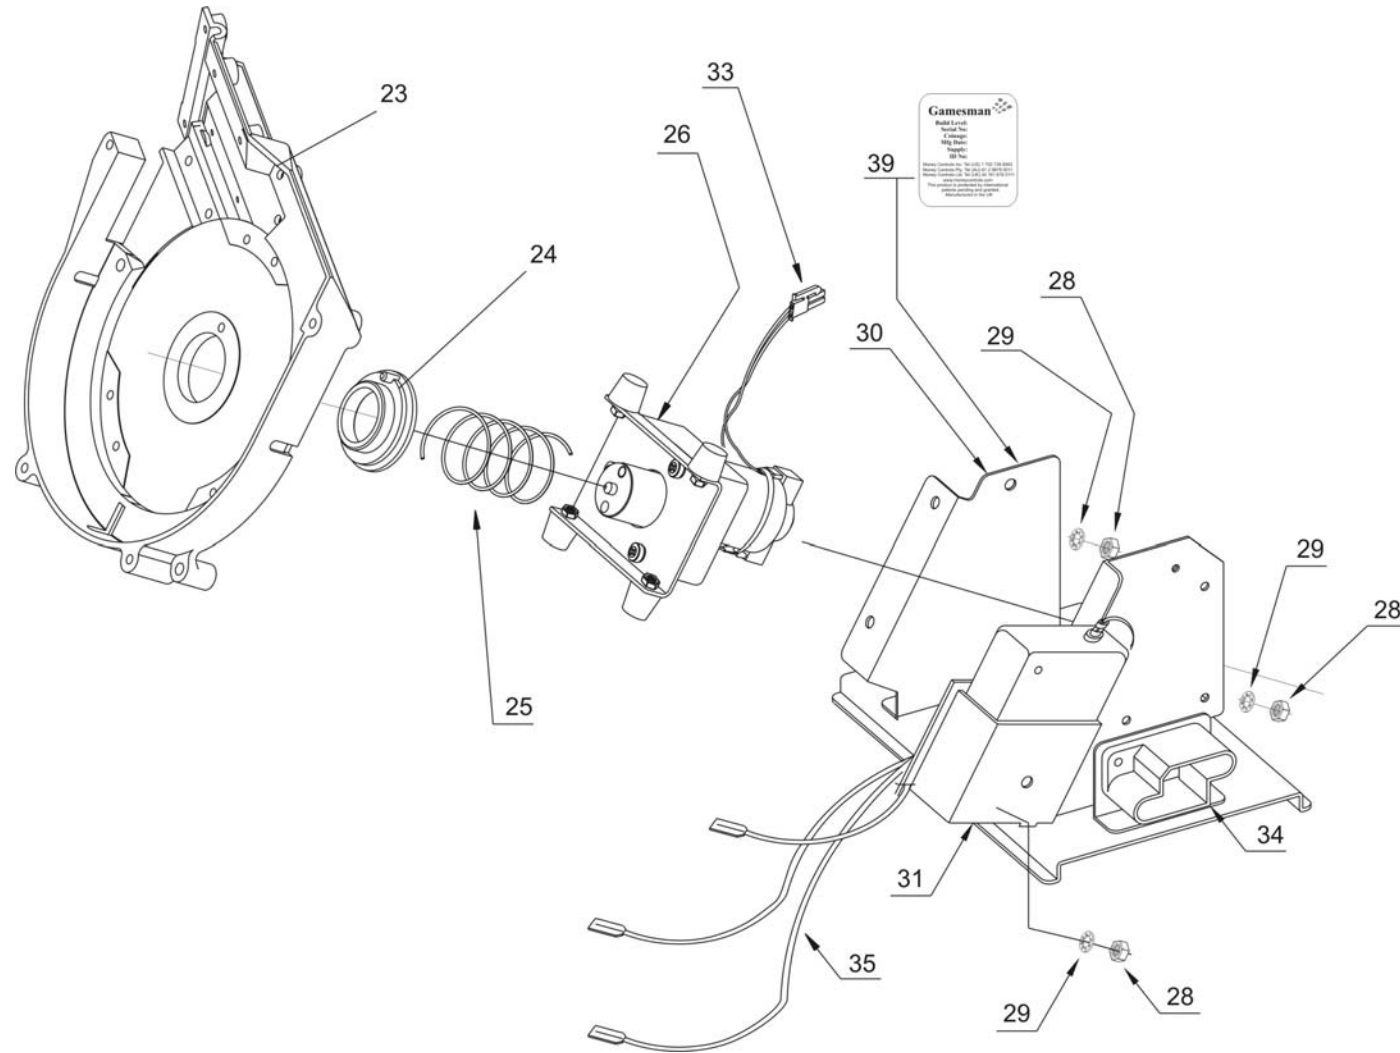

Item No	Description	Part No	Comments
1	Bowl Unit		Coin/Token Dependent
2	M6 x 25 Shoulder Screw	HSC/356	
3	Yoke Colour Spacers		Coin/Token Dependent
4	Spacer 1	MER/280	
5	Spacer 2	MER/281	
6	Bridge Plate Unit		Coin/Token Dependent
7	M6 x 20 Pozi pan screw	HSC/363	
8	6mm Shakeproof Washer	HWA/037	
9	M6 x 35 Pozi pan screw	HSC/369	Coin/Token Dependent
10	M6 x 16 dog point screw	HSC/750	
11	M6 Hex Nut	HNT/026	
12	M6 x 20 Pozi Pan Screw	HSC/363	
13	Disc Unit		Coin/Token Dependent
14	M6 x 16 Pozi c/sk Anu-Lok Screw	HSC/389	
15	Horseshoe		Coin/Token Dependent
16	M4 Pozi pan screw	HSC/140	Coin/Token Dependent
17	4mm Washer	HWA/012	Coin/Token Dependent
18	4mm Shakeproof Washer	HWA/026	Coin/Token Dependent
19	Wiper Spacer		Coin/Token Dependent
20	M6 x 20 Pozi c/sk screw	HSC/390	
21	6mm Shakeproof Washer	HWA/037	
22	M6 Hex Nut	HNT/026	
23	Housing Unit	SUB/3492	
24	Rotary Bearing	PBL/620	
25	Spring	SPR/030	
26	Drive Assembly	SUB/4452	
27	M6 x 30 Pozi pan screw	HSC/361	
28	M6 Hex Nut	HNT/026	
29	6mm Shakeproof Washer	HWA/037	
30	Frame Assembly	SUB/3479	
31	PSU		
32	Opto Assembly	SUB/2660	This item is part of the Bridge Plate Unit.
33	Motor Loom		Ref. Only this item is Part of Main Harness
34	Main Harness	WMH/333	
35	Level Sense Wires		Ref. Only this item is Part of Main Harness
36	M6 x 35 Pozi c/sk screw	HSC/718	Coin/Token Dependent
37	Filler Pieces Extension	MER/169	Coin/Token Dependent
38	Yoke Colour Spacers Label		Coin/Token Dependent
39	Hopper Label	TPL/010	Coin/Token Dependent

9. Overall Dimensions

Figure 5: Overall Dimensions

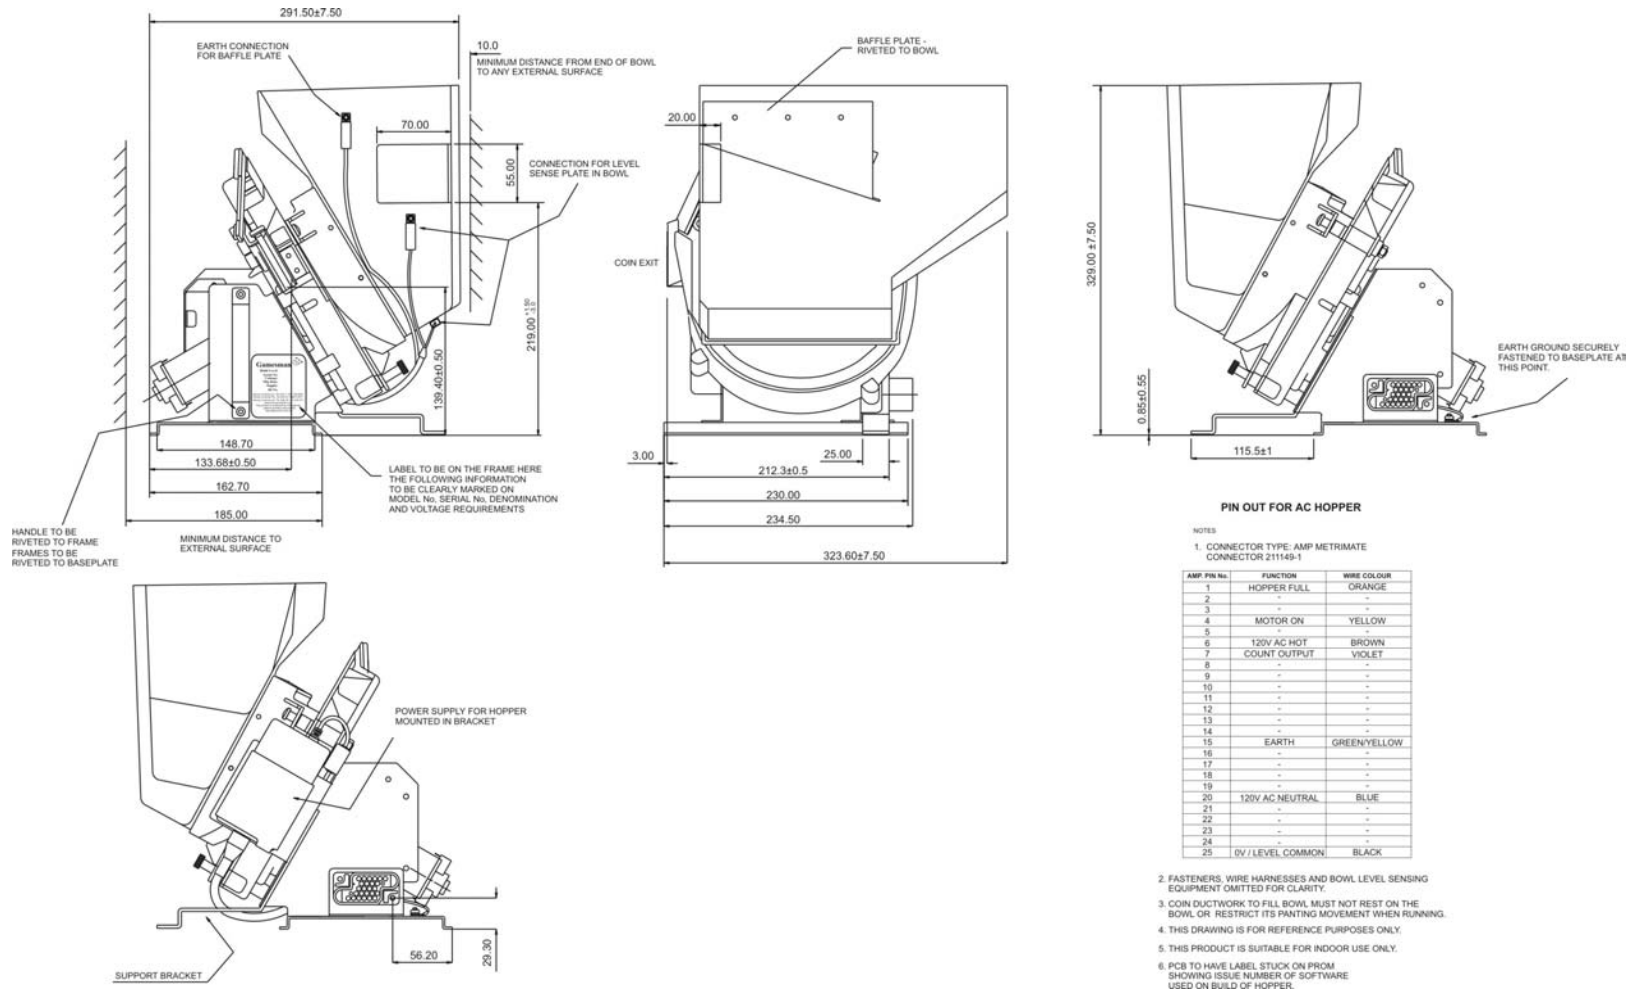

10. Spare Parts


Table 3: Recommended Spare Parts

Item No	Part No	Description	No off	Config No
	MER/279	Support Bracket	1	SGPGMGXX00217
	SUB/2661	Control Board	1	GC205GXX00011
26	SUB/2409	Drive Assembly 3	1	SGPGMGXX00211
32	SUB/2660	Opto PCB Assembly	1	SGPGMGXX00148
31	PSU/002	Power Supply	1	GP2SPSXX00005

Appendix 1 (Fitting the Bridge Plate).

1. When fitting the Bridge plate to the housing, insert screws X & Y and HAND TIGHTEN.
2. Tighten the BOTTOM screw X to the torque settings shown in [Figure 2: Torque Settings](#).
3. Tighten the TOP screw Y to the torque settings shown in [Figure 2: Torque Settings](#).

Failure to follow the above steps may result in incorrect operation.

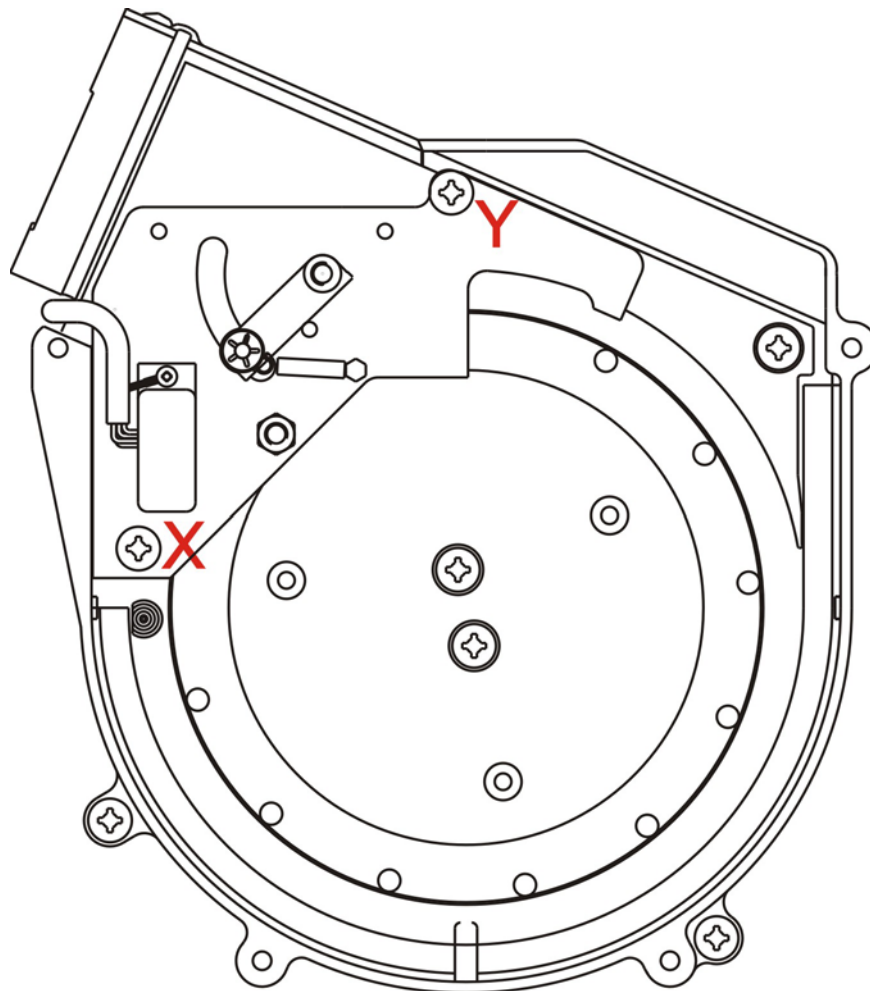

This manual is intended only to assist the reader in the use of this product and therefore Money Controls shall not be liable for any loss or damage whatsoever arising from the use of any information or particulars in, or any incorrect use of the product. Money Controls reserve the right to change product specifications on any item without prior notice