

Condor Plus MechToolTM Manual



This document is the private unpublished property of Money Controls Ltd and may not be reproduced in part or in total by any means, electronic or otherwise, without the written permission of Money Controls Ltd. Money Controls Ltd does not accept liability for any errors or omissions contained within this document. Money Controls Ltd shall not incur any penalties arising out of the adherence to, interpretation of, or reliance on, this standard. Money Controls Ltd will provide full support for this product when used as described within this document. Use in applications not covered or outside the scope of this document may not be supported. Money Controls Ltd. reserves the right to amend, improve or change the product referred to within this document or the document itself at any time.

Contents

1. Diary of Changes	3
2. MechTool™ Mode	4
2.1 MechTool™ Entry	4
2.2 MechTool™ Exit	4
2.3 MechTool™ Options	5

Tables

Table 1: Eeprom flags v Rotary switch positions	11
Table 2: Coin Security Options	12
Table 3: Inhibit Status v Eeprom Flags	14
Table 4: Inhibit Conversion	14
Table 5: LED Flag Status Example	20
Table 6: Window Programmed Status Example	22

Figures

Figure 1: Coin Security – Rotary Switch	13
---	----

Flow Charts

Flow Chart 1: Window Tweaks Mode	6
Flow Chart 2: Test VACS and Credit Mode	7
Flow Chart 3: Test Alarm Output	8
Flow Chart 4: Test Gate Continuously	9
Flow Chart 5: Flag Change Mode	10
Flow Chart 6: Clear Coin Divert	15
Flow Chart 7: Set Coin Divert	16
Flow Chart 8: Reset Coin Tweaks to Zero	17
Flow Chart 9: Erase ALL Windows	18
Flow Chart 10: Display Flag Status	19
Flow Chart 11: Display Window Status	21
Flow Chart 12: Enable All Coins	23
Flow Chart 13: Disable All Coins	24
Flow Chart 14: Enable a Coin	25
Flow Chart 15: Disable a Coin	26

1. Diary of Changes

Issue 1.0.....August 2001

Issue 1.1.....16th March 2002

- Applied TMWP v3.0 .

Issue 1.2.....6th Sept 2002

- Modification to disclaimer

2. MechTool™ Mode

(The rotary switch has no functional effect in **CPxxxA** applications).

MechTool™ is a new feature on the Condor Plus. It allows basic programming functions, some of which are taken from the Condor Toolkit and some are new. (see MechTool™ Options - Page 5).

As before, the **MechTool™** option has to be set when ordering. If **MechTool™** is OFF then none of the following are available.

The LED, on the rear cover, is used to show at which stage the user is at when the Condor Plus is in **MechTool™** mode. The colours used are as follows:

- LED Green : Condor Plus normal operation - OK
- LED flashing Yellow : first level - **MechTool™** mode selected
- LED flashing Yellow / green : second level of **MechTool™** mode
- LED flashing Yellow / Red : third level of **MechTool™** mode

In some options the LED will flash Green and or Red to show flag states, window states and when changing critical data in EEPROM.

2.1 MechTool™ Entry

To enter **MechTool™**, set the rotary switch to position 0 and then press the program button until the LED changes colour from Green to flashing Yellow.

If the LED remains Green, then **MechTool™** has not been enabled by Money Controls and the following functions are not available.

If **MechTool™** can be entered, the functions listed on page 5 are available.

Flow charts, explain in detail, how to use each function.

2.2 MechTool™ Exit

To exit **MechTool™**, set the rotary switch to position 0 and then press the program button until the LED changes colour from flashing Yellow to Green.


If this is not done then the Condor Plus will time-out after approx. 30 secs. and assume normal operation.

2.3 MechTool™ Options

0. **MechTool™** enter/exit.
1. Window tweaks mode.
(after entering this mode select window number then select the tweak value).
2. Test VACS followed by credit – uses timers in EEPROM.
(VACS timer, credit timer and credit gap timer).
3. Test Alarm.
4. Test Gate continuously.
(pressing the push button or moving the rotary switch cancels the test).
5. Flag change mode.
(after selecting this mode the following flags can be set):
 0. Teach off.
 1. Teach on.
 2. Alarm off.
 3. Alarm on.
 4. Diagnostic off.
 5. Diagnostic on.
 6. All coins window tuning off.
 7. All coins window tuning on.
 8. Individual window tweaks disabled.
 9. Individual window tweaks enabled.
 - A. Secure tuning disabled.
 - B. Secure tuning enabled.
 - C. Master inhibit active HIGH - at the connector.
 - D. Master inhibit active LOW - at the connector.
 - E. Master inhibit drive LOW.
 - F. Master inhibit drive HIGH.
6. Clear coin divert.
(after entering this mode select window number).
7. Set coin divert.
(after entering this mode select window number).
8. Reset all individual coin tweaks to zero.
9. Erase all windows.
(also sets 'all coin tweaks' to zero).
- A. Display flag status by pulsing LED.
(green = 1 / red = 0).
- B. Display windows programmed by pulsing LED.
(green = window programmed / red = window not programmed).
- C. Enable all coins.
- D. Disable all coins.
- E. Enable a coin.
(after entering this mode select coin number).
- F. Disable a coin.
(after entering this mode select coin number).

Flow Chart 1: Window Tweaks Mode


RS = Rotary Switch Position

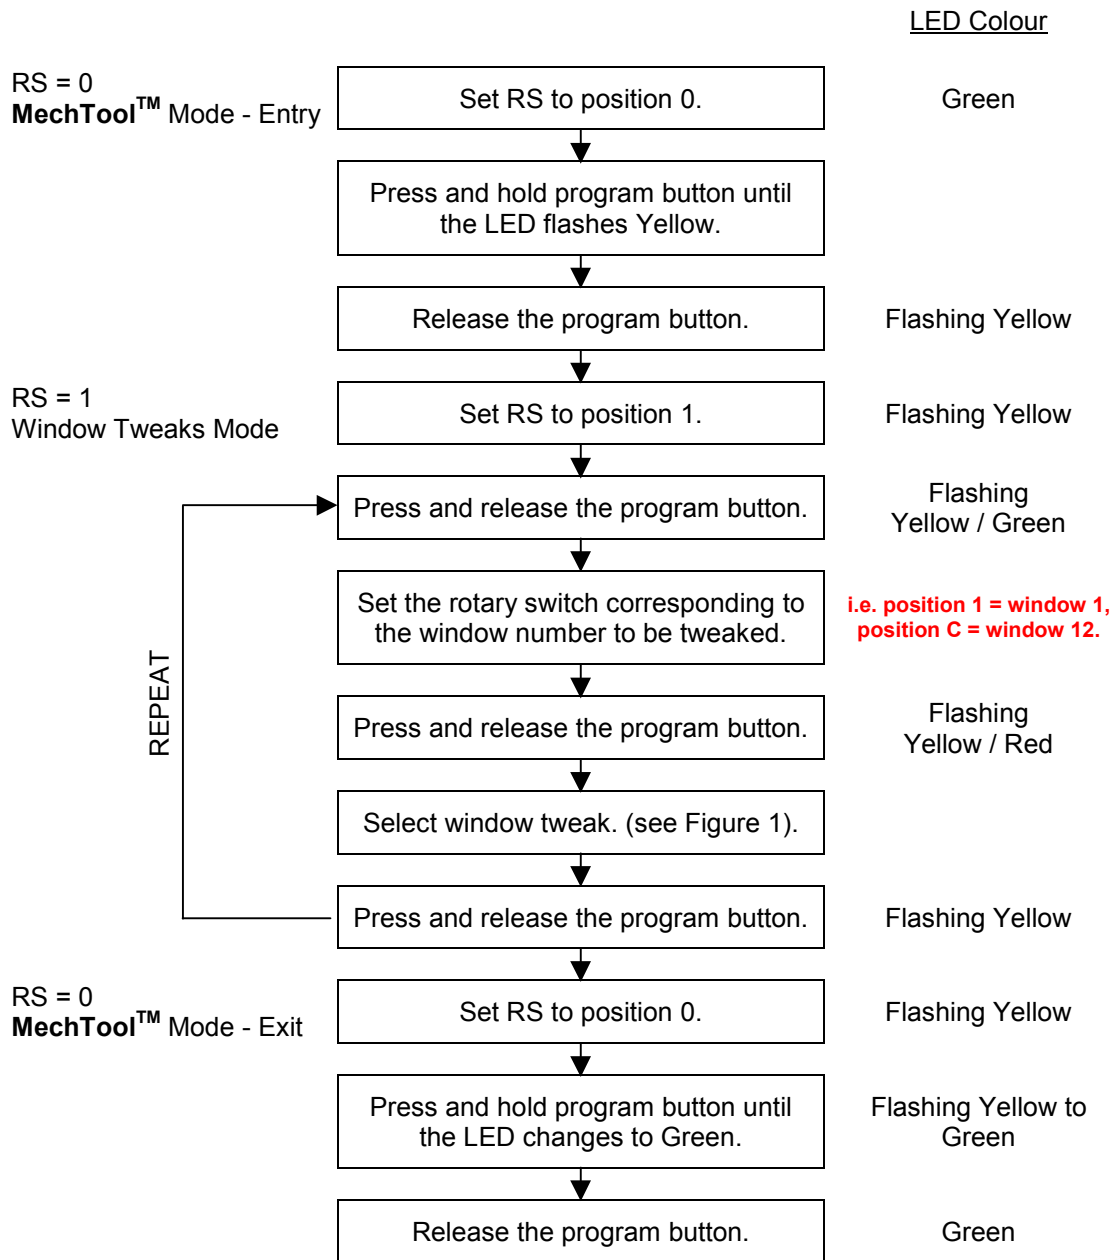

This programs the window tweaks into memory.

Flow Chart 2: Test VACS and Credit Mode

RS = Rotary Switch Position

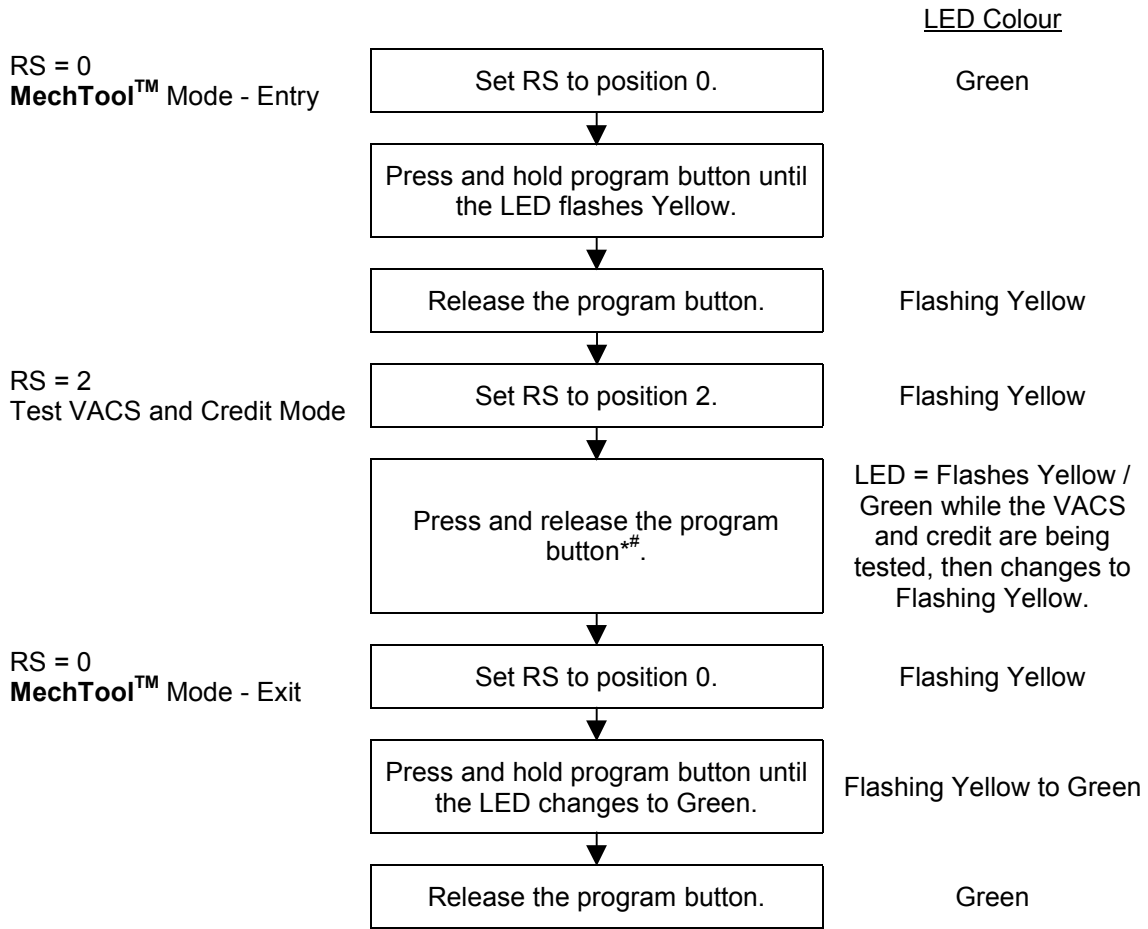


*The VACS pin is pulsed, after a short gap the credit pin is pulsed, simulates real time pulses.

#To repeat, press the program button again.

Flow Chart 3: Test Alarm Output

RS = Rotary Switch Position

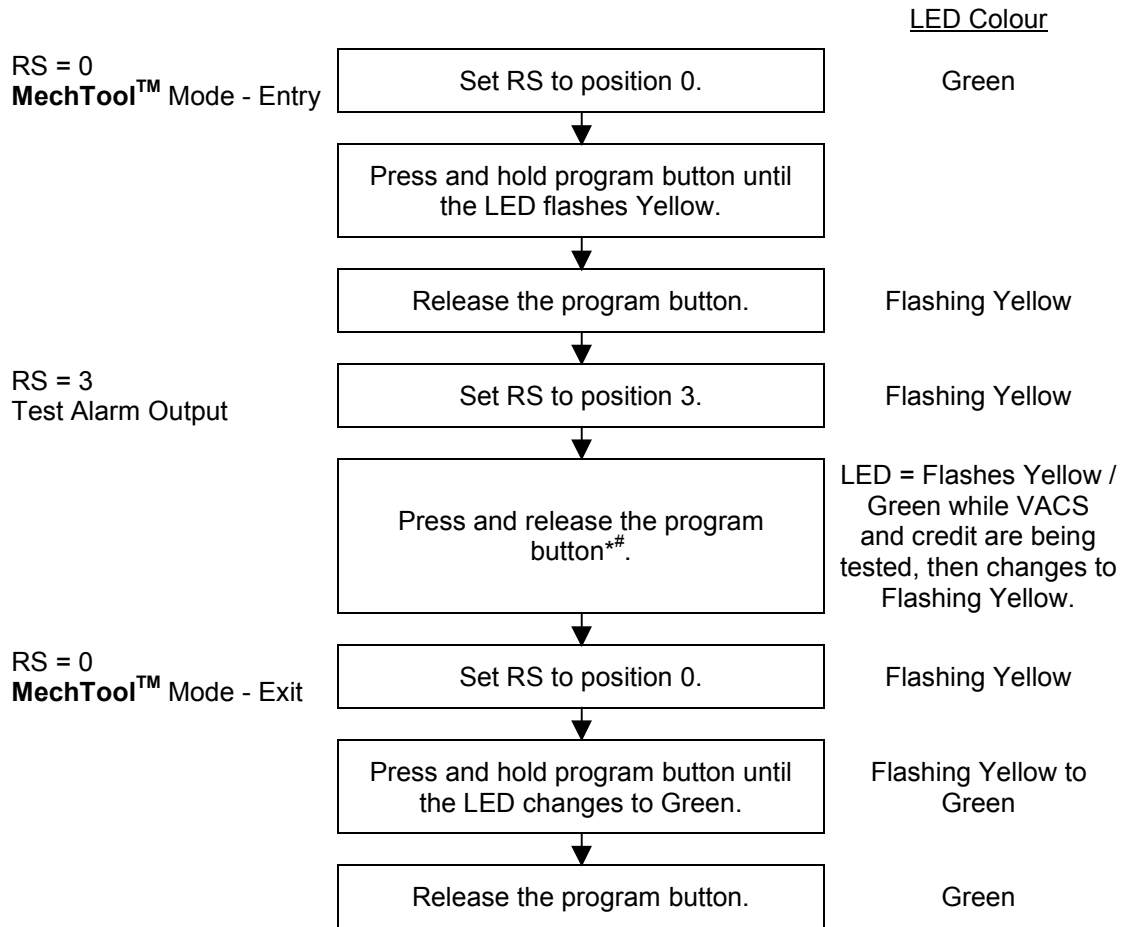


*The Alarm pin will be active for the duration of the Alarm timer in EEPROM.

#To repeat, press the program button again.

Flow Chart 4: Test Gate Continuously

RS = Rotary Switch Position

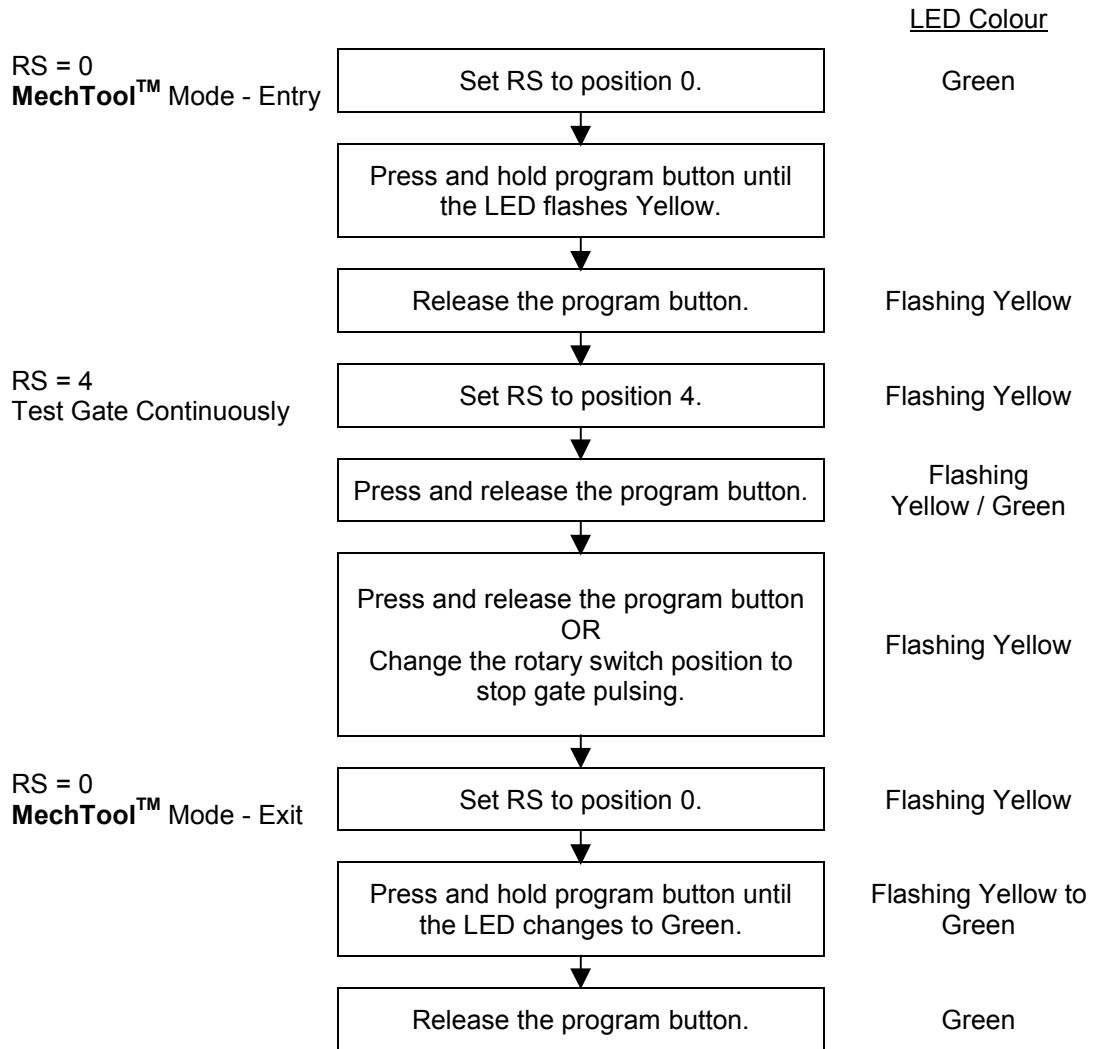

Accept gate pulsed with 50% duty cycle.

Flow Chart 5: Flag Change Mode

RS = Rotary Switch Position

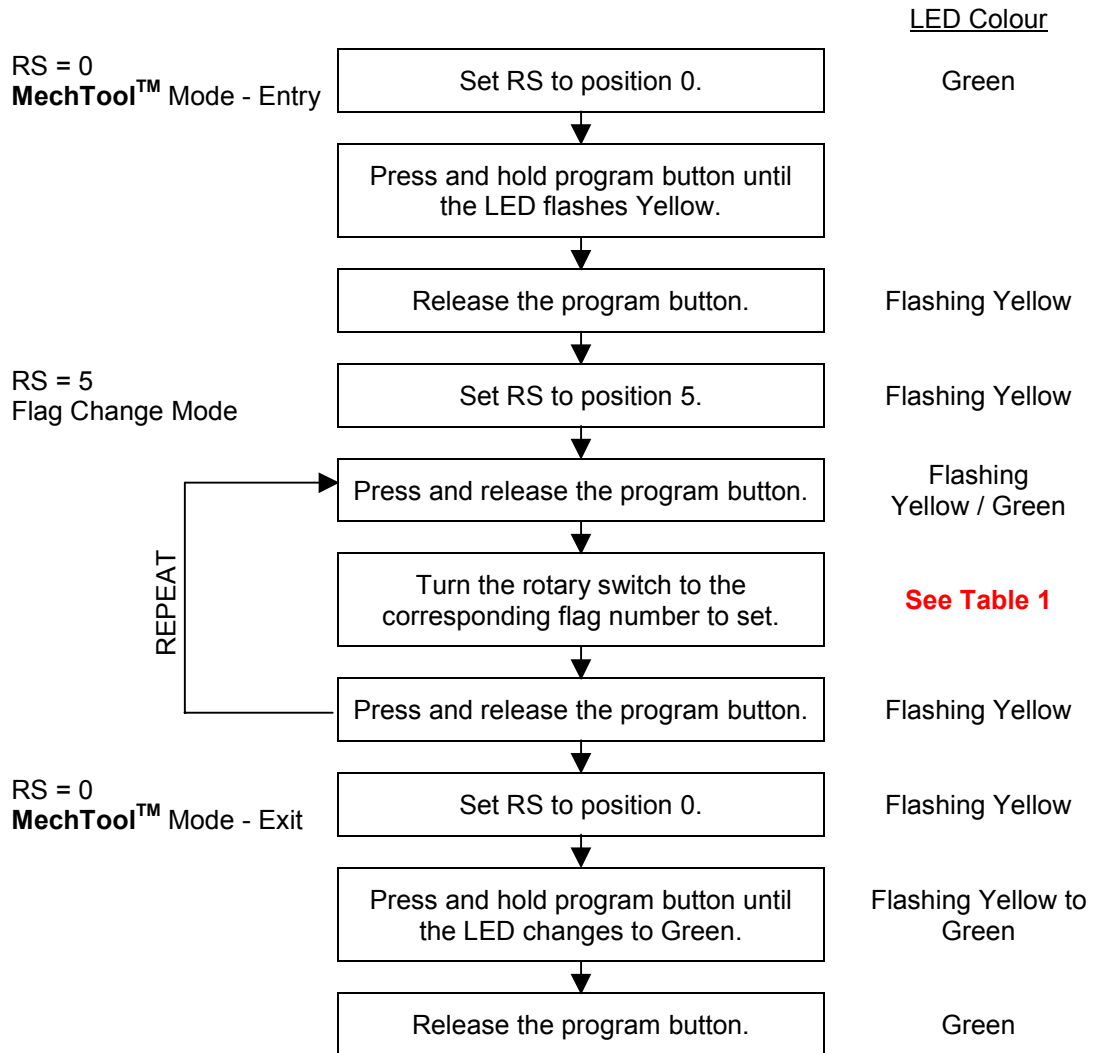


Table 1: Eeprom flags v Rotary switch positions

Rotary switch position.	Flag function.
0	Teach off.
1	Teach on.
2	Alarm off.
3	Alarm on.
4	Diagnostic off.
5	Diagnostic on.
6	Window Tuning OFF. (All coins window tuning OFF). (See Table 2)
7	Window Tuning ON. (All coins window tuning ON). (See Table 2)
8	Individual Tuning OFF. (Individual window tweaks DISABLED). (See Table 2)
9	Individual Tuning ON. (Individual window tweaks ENABLED). (See Table 2)
A	Secure Tuning OFF. (Window widening ENABLED). (See Table 2)
B	Secure Tuning ON. (Window widening DISABLED). (See Table 2)
C	Master Inhibit active high – at the conn. (See Table 3)
D	Master Inhibit active low – at the conn. (See Table 3)
E	Master Inhibit drive low. (See Table 3)
F	Master Inhibit drive high. (See Table 3)

Table 2: Coin Security Options

Window Tuning¹	Secure Tuning²	Individual Tuning³	Coin Security Level
OFF	OFF	OFF	No coin window modification is possible. (Condor – Security Switch OFF).
OFF	OFF	ON	Individual window tweaks possible. Windows can be widened or narrowed.
OFF	ON	OFF	No coin window modification is possible. (Condor – Security Switch OFF).
OFF	ON	ON	Individual window tweaks possible, but tweaks can only narrow programmed windows.
ON	OFF	OFF	<i>Standard Tuning¹</i> on all windows which can be widened or narrowed – (Condor).
ON	OFF	ON	Both <i>Standard Tuning¹</i> and individual window tweaks are possible on all windows which can be widened or narrowed. Their cumulative ⁴ effect on the window is used.
ON	ON	OFF	<i>Standard Tuning¹</i> performed on ALL windows, but only to narrow programmed windows.
ON	ON	ON	Both <i>Standard Tuning¹</i> and individual window tweaks are possible on all windows which can be narrowed only. Their cumulative ⁴ effect on the window is used.

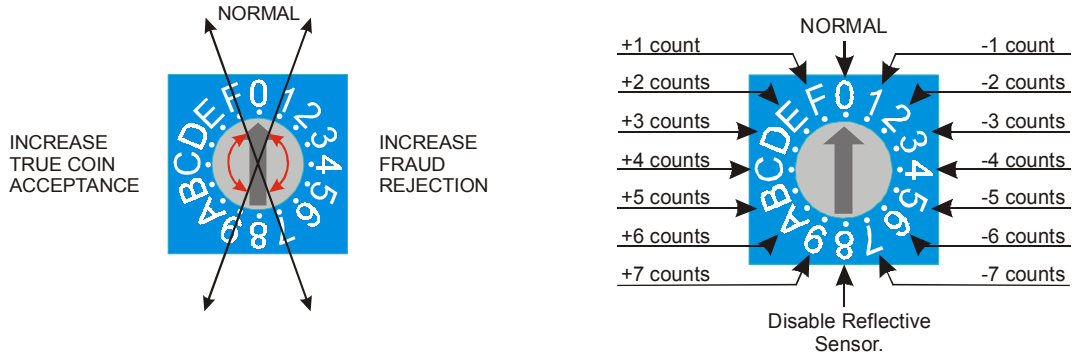


Figure 1: Coin Security – Rotary Switch

Each count is added/subtracted to/from the upper/lower limits of the programmed windows, therefore, each count represents an **actual** increase/reduction of 2 counts.

¹ Window Tuning (Standard Tuning), when enabled, allows window tweaks during ‘normal’ operation of the Condor Plus. The window tweak selected is applied to ALL the windows simultaneously.

² Secure Tuning, when enabled, only allows windows to be narrowed – NOT widened.

Note:- Enabling Secure Tuning will IGNORE previously prog'd window WIDENING values.

³ Individual Tuning, when enabled, allows individual window tweaks to be programmed into Eeprom.

Note:- Disabling Individual Tuning will IGNORE previously prog'd Individual Tuning values.

⁴ Cumulative effect. Any *Standard Tuning* tweaks are added to tweaks programmed in Eeprom. e.g. Individual tweak = 2 (-2 counts), standard tuning tweak = D (+3 counts), total effect on the programmed window = +1 count top and bottom of each sensor window.

Table 3: Inhibit Status v Eeprom Flags

Inhibit Digit	Inhibit Status	C/D	E/F
0	Inhibit High – Default Inhibit	C	F
1	Inhibit High – Default Accept	C	E
2	Inhibit Low – Default Inhibit	D	E
3	Inhibit Low – Default Accept	D	F

e.g. to change from a CP103 to a CP100 SET **C**, (**F** is already set).


Table 4: Inhibit Conversion

From \ To	CPxx0	CPxx1	CPxx2	CPxx3
CPxx0		E	D, E	D
CPxx1	F		D	D, F
CPxx2	C, F	C		F
CPxx3	C	C, E	E	

IMPORTANT:- Power must be removed and re-applied for changes to fully take place.

Flow Chart 6: Clear Coin Divert


RS = Rotary Switch Position

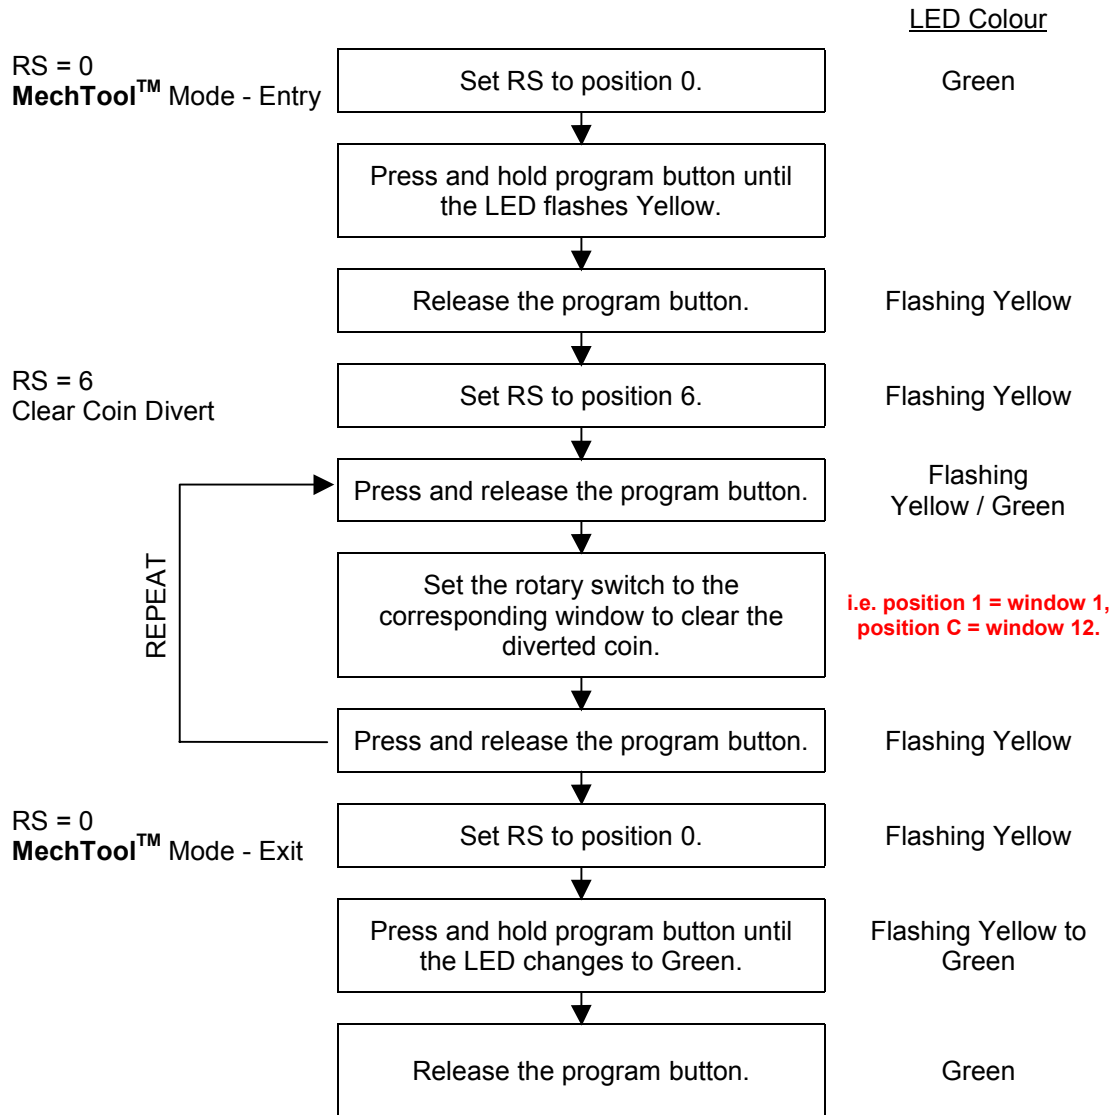

This clears the coin divert information from EEPROM memory.

Flow Chart 7: Set Coin Divert


RS = Rotary Switch Position

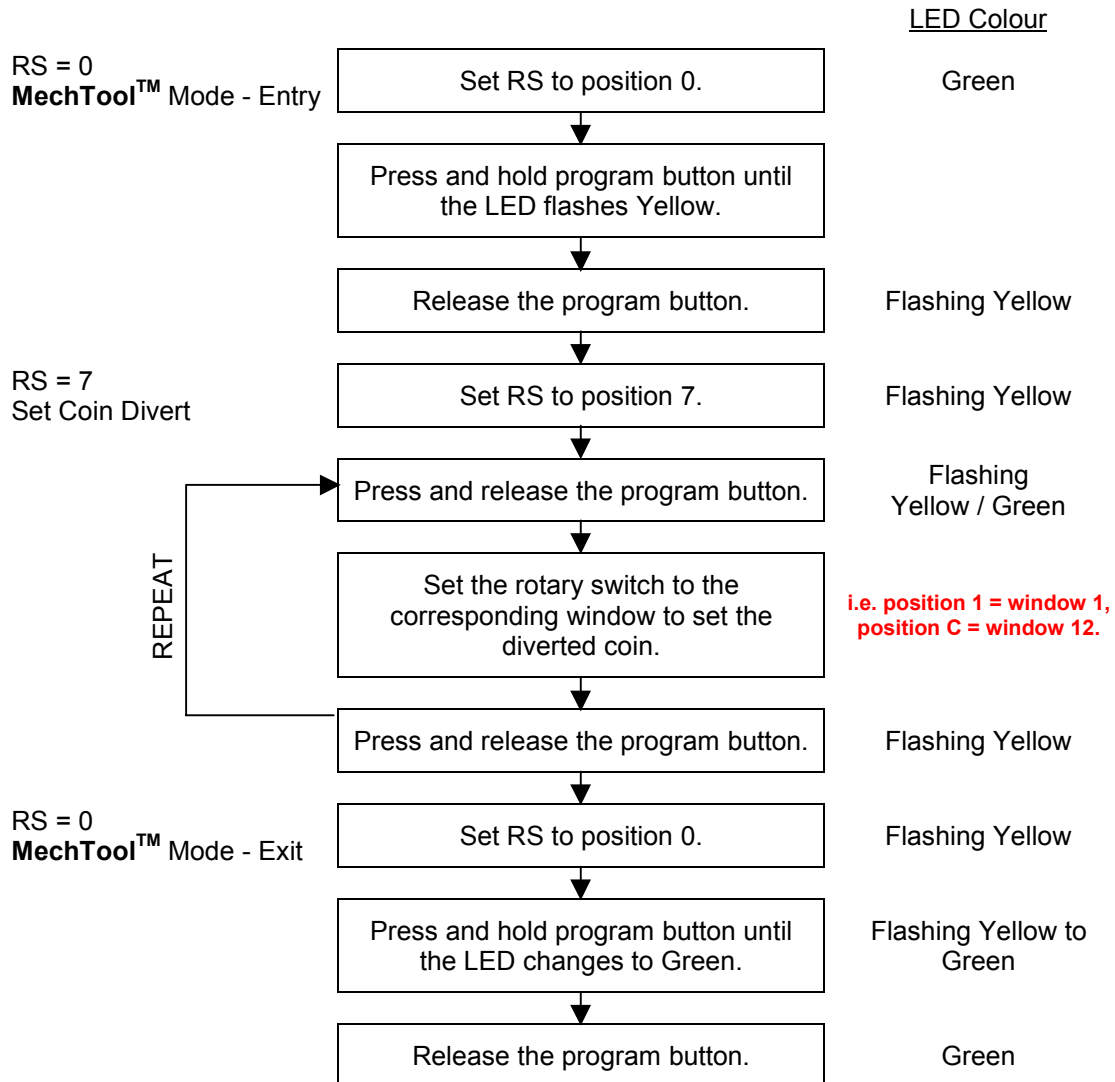

This programs the coin divert information into EEPROM memory.

Flow Chart 8: Reset Coin Tweaks to Zero

RS = Rotary Switch Position

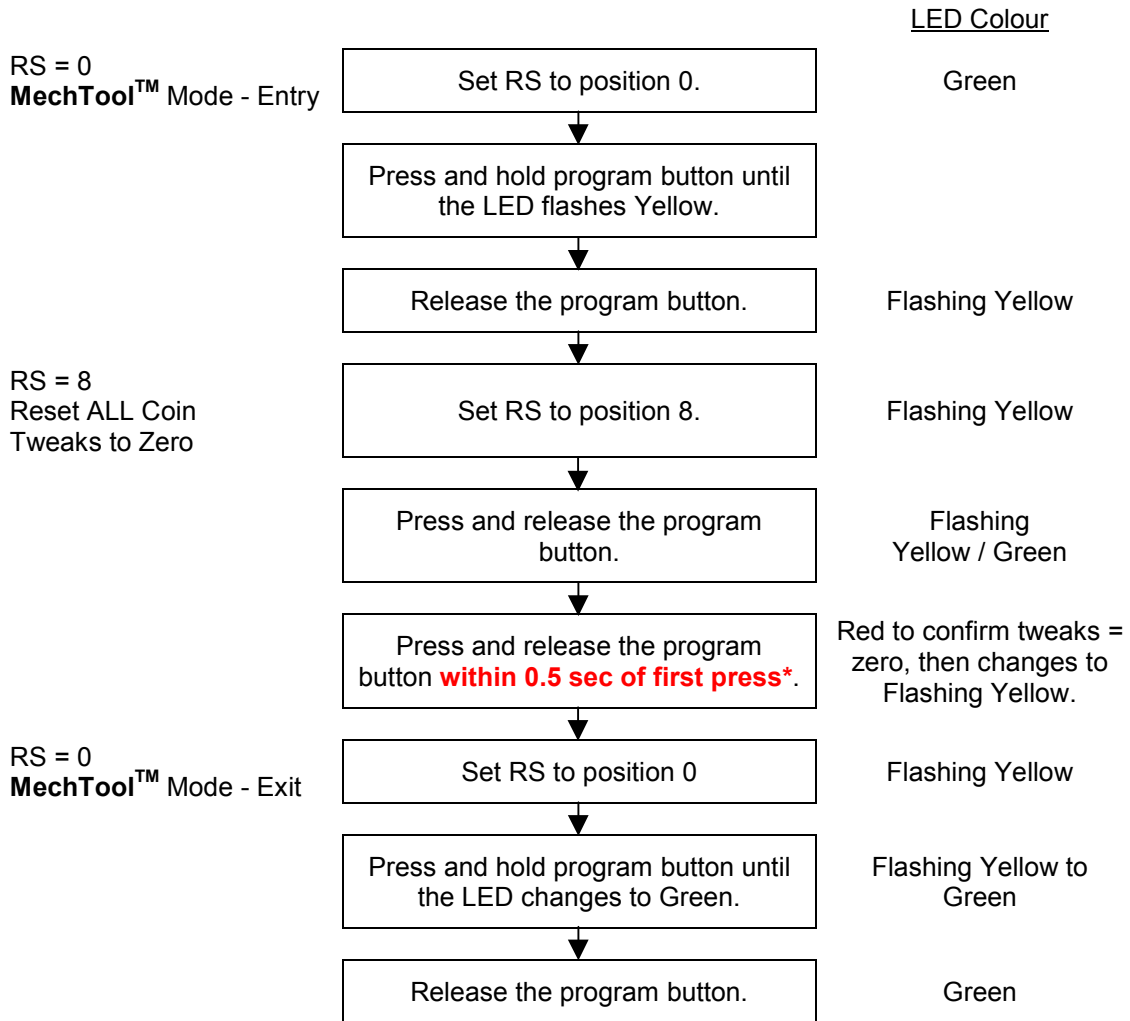


* Keep pressing twice – until the LED changes to RED = Tweaks Reset.

This clears ALL the window tweaks in EEPROM.
 As a safeguard with this function, the program button must be pushed twice within 1/2 second to ensure erasure of the window tweaks.
 Failure to do so will leave the window tweaks intact.

Flow Chart 9: Erase ALL Windows

RS = Rotary Switch Position

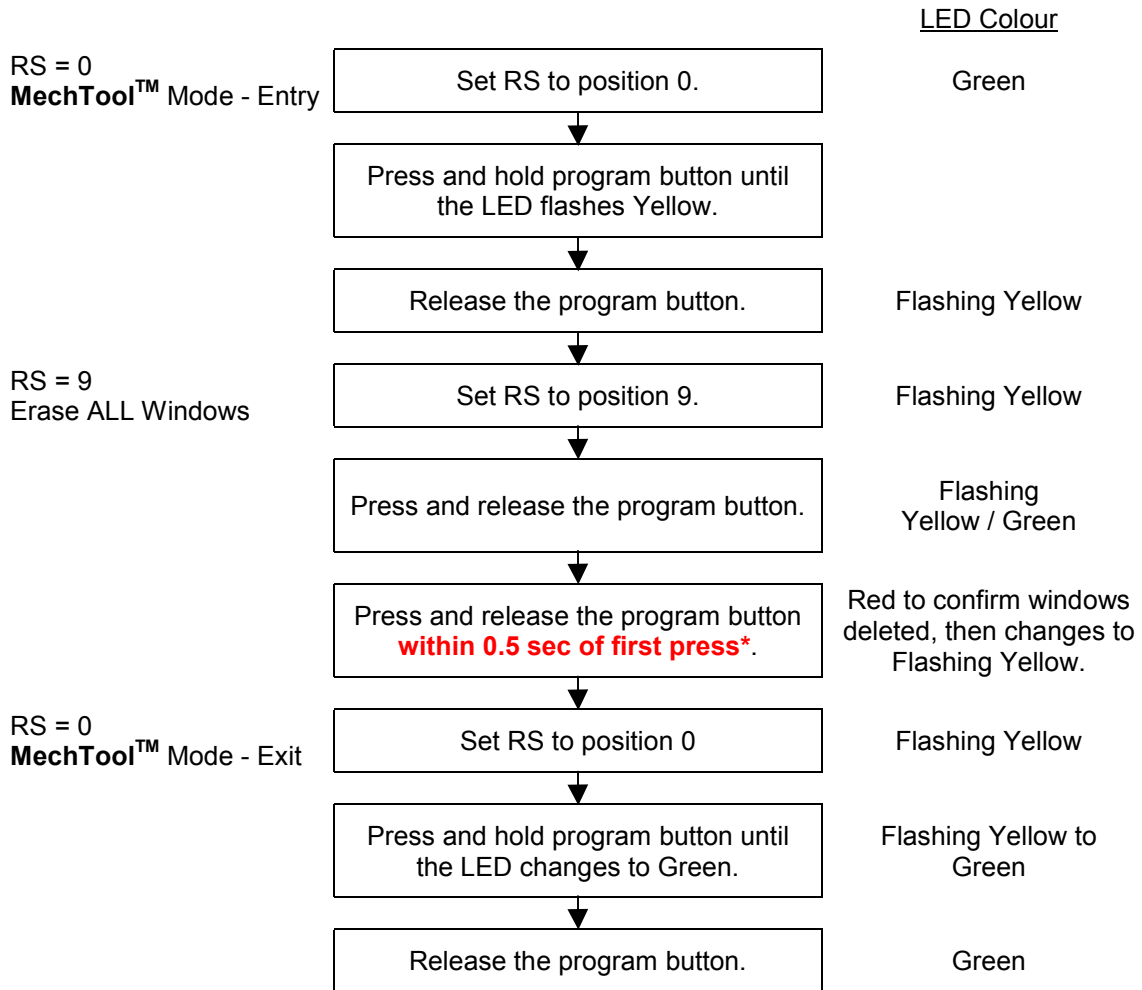

*** Keep pressing twice – until the LED changes to RED = Windows Erased.**


This clears ALL the windows in EEPROM, including window tweaks.

As a safeguard with this function, the program button must be pushed twice within 1/2 second to ensure erasure of the coin windows.

Failure to do so will leave the coin windows intact.

Flow Chart 10: Display Flag Status



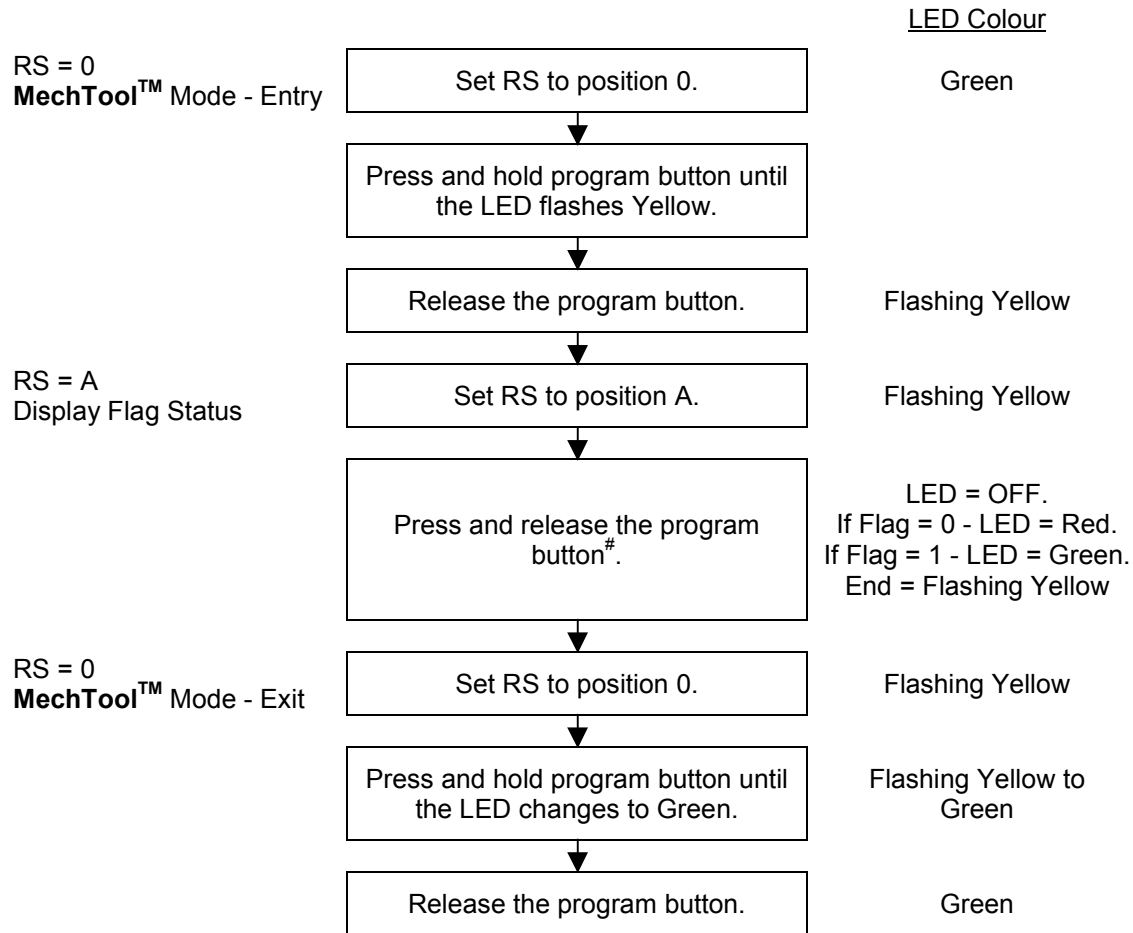
















RS = Rotary Switch Position



[#]Press again to repeat the sequence.


See Table 5 for an example of the sequence seen.

Table 5: LED Flag Status Example

Flag	Description	LED	Status
			
	Off		
0	Teach		ON
	Off		
1	Alarm		ON
	Off		
2	Diagnostics		OFF
	Off		
3	Window Tuning		ON
	Off		
4	Window Tweaks		Disabled
	Off		
5	Window Widening		Enabled
	Off		
6	Inhibit Polarity		Low
	Off		
7	Inhibit Drive		High
	Off		
			

Flow Chart 11: Display Window Status



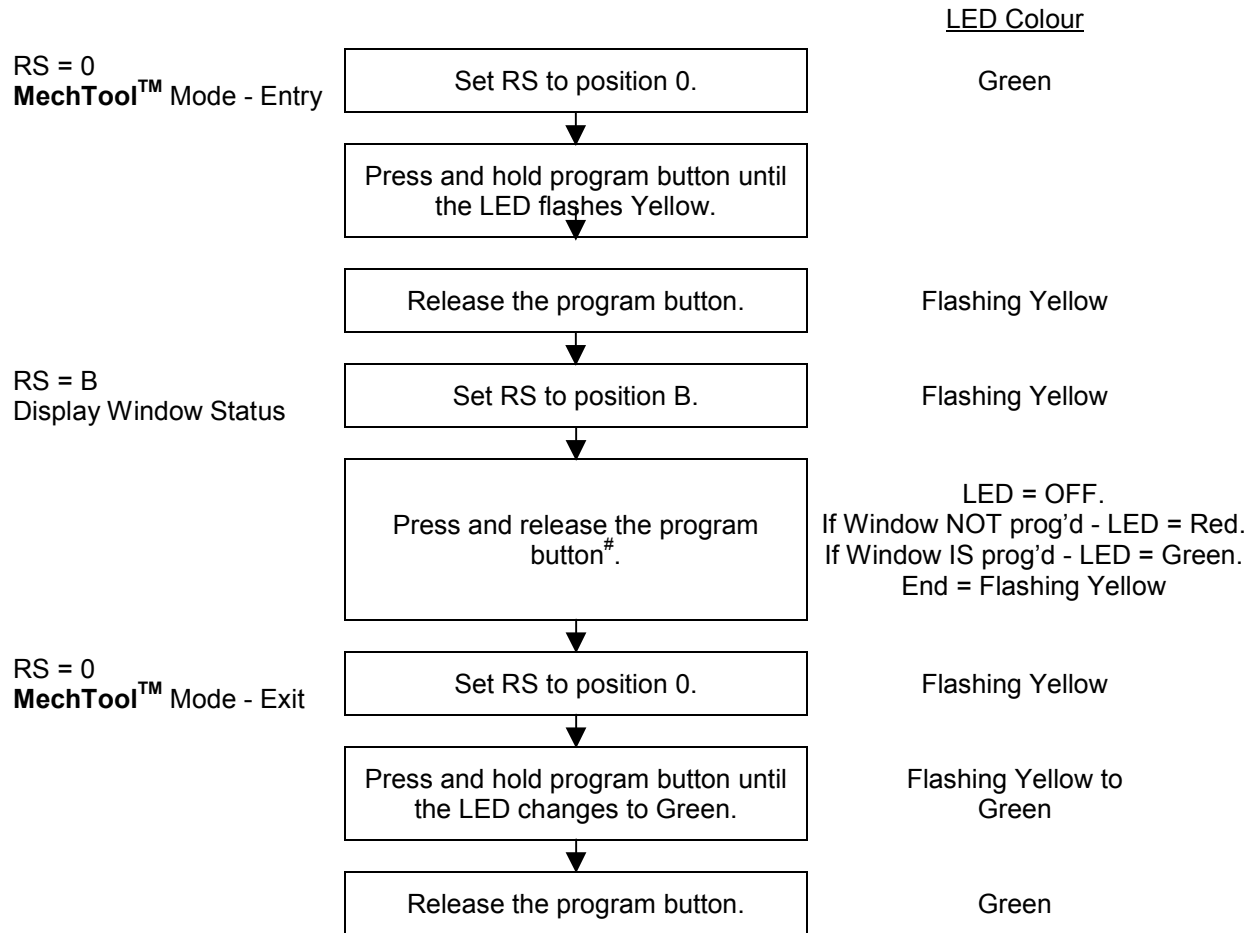
























RS = Rotary Switch Position



[#]*Press again to repeat the sequence.*


See Table 6 for an example of the sequence seen.

Table 6: Window Programmed Status Example

Window	Description	LED	Programmed
			
	Off		
1	Checks Window 1 Status		YES
	Off		
2	Checks Window 2 Status		YES
	Off		
3	Checks Window 3 Status		YES
	Off		
4	Checks Window 4 Status		YES
	Off		
5	Checks Window 5 Status		YES
	Off		
6	Checks Window 6 Status		NO
	Off		
7	Checks Window 7 Status		NO
	Off		
8	Checks Window 8 Status		NO
	Off		
9	Checks Window 9 Status		NO
	Off		
10	Checks Window 10 Status		NO
	Off		
11	Checks Window 11 Status		NO
	Off		
12	Checks Window 12 Status		NO
	Off		
			

Flow Chart 12: Enable All Coins


RS = Rotary Switch Position

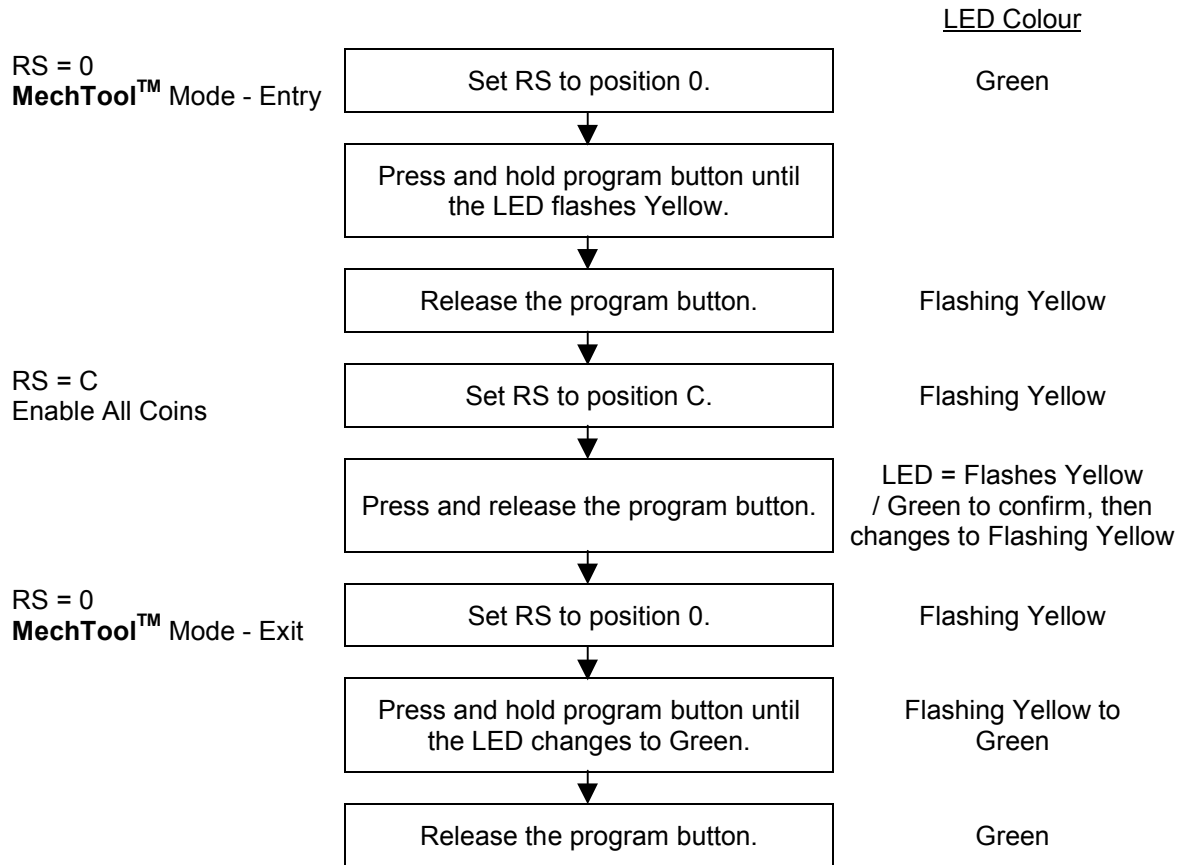

This Enables ALL the programmed coins.

Flow Chart 13: Disable All Coins


RS = Rotary Switch Position

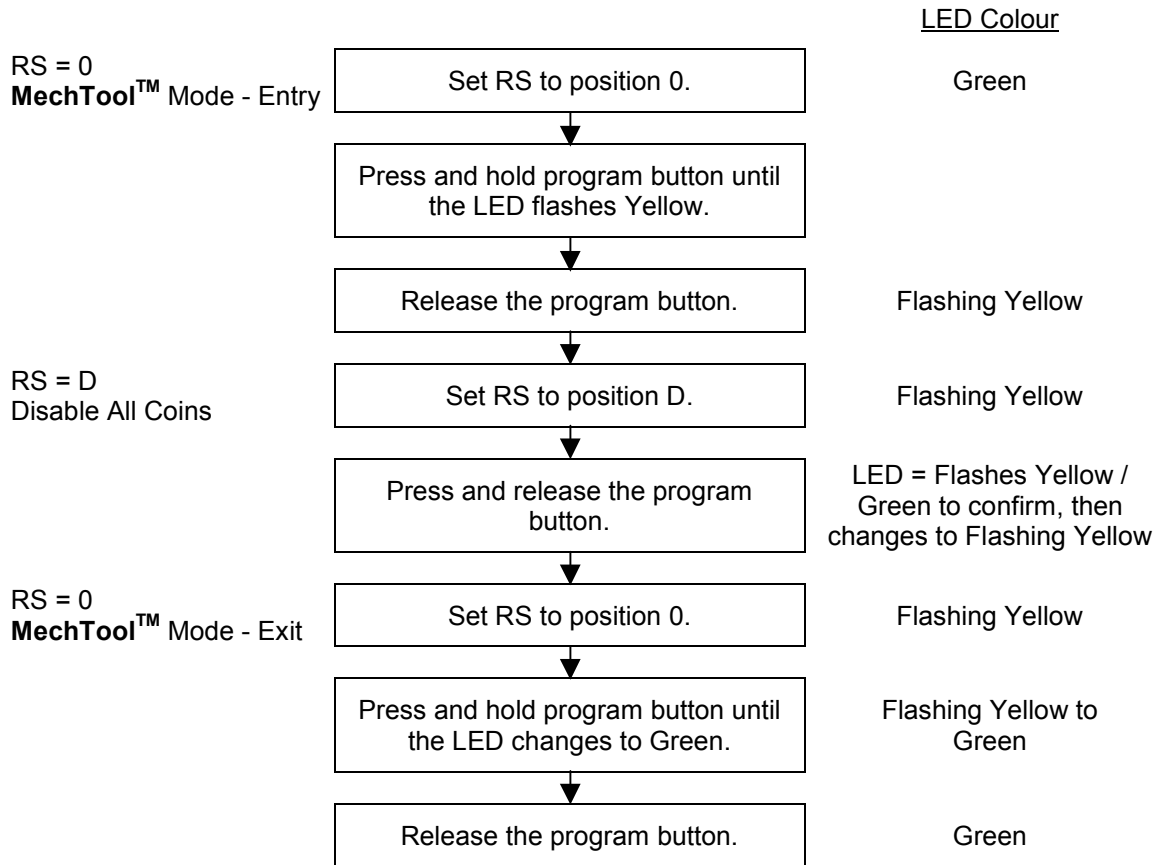

This Disables ALL the programmed coins.

Flow Chart 14: Enable a Coin

RS = Rotary Switch Position

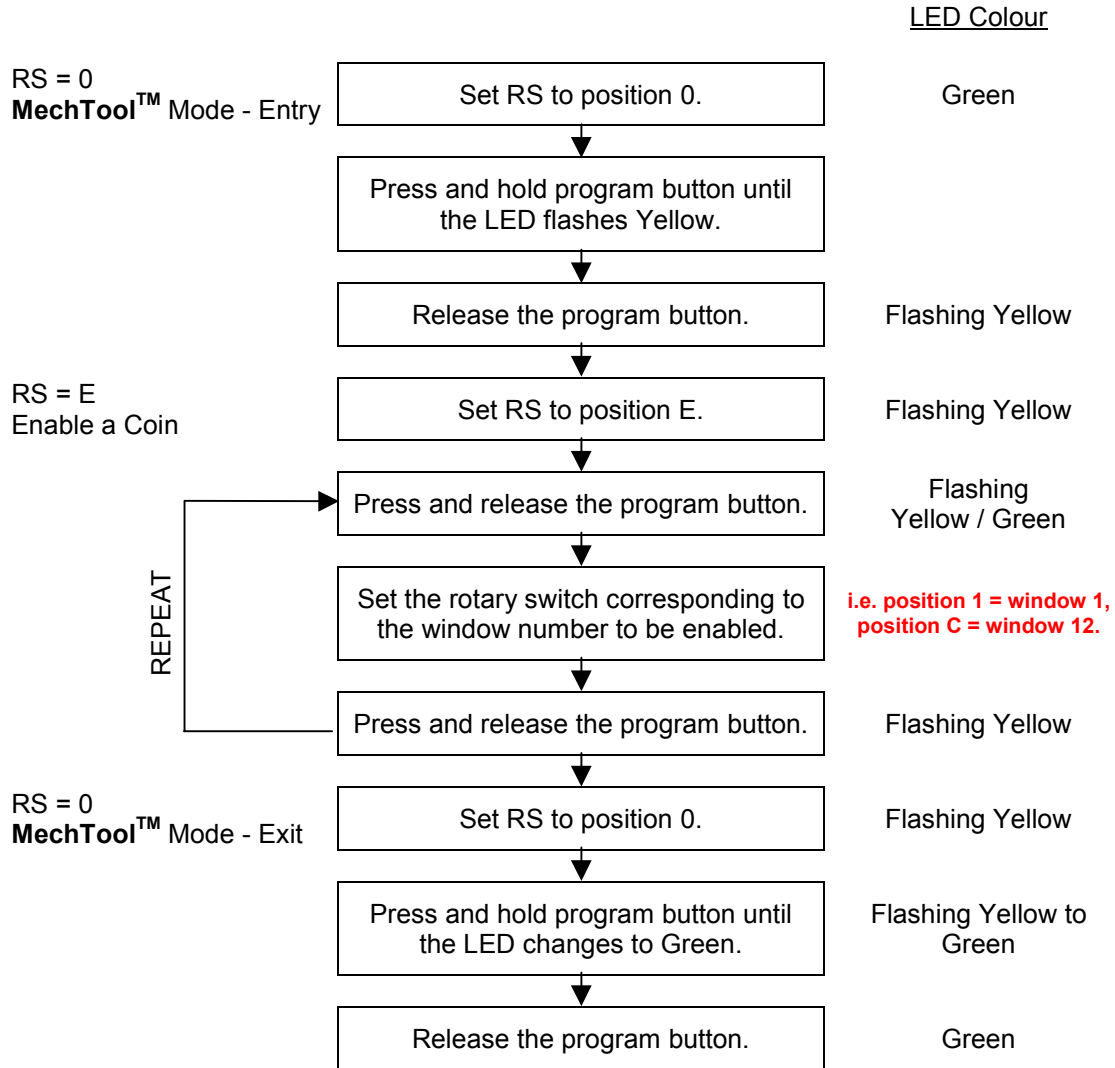


This enables the selected coin window.

Note: this does not affect any other coin, only the selected coin inhibit is changed.

Flow Chart 15: Disable a Coin

RS = Rotary Switch Position

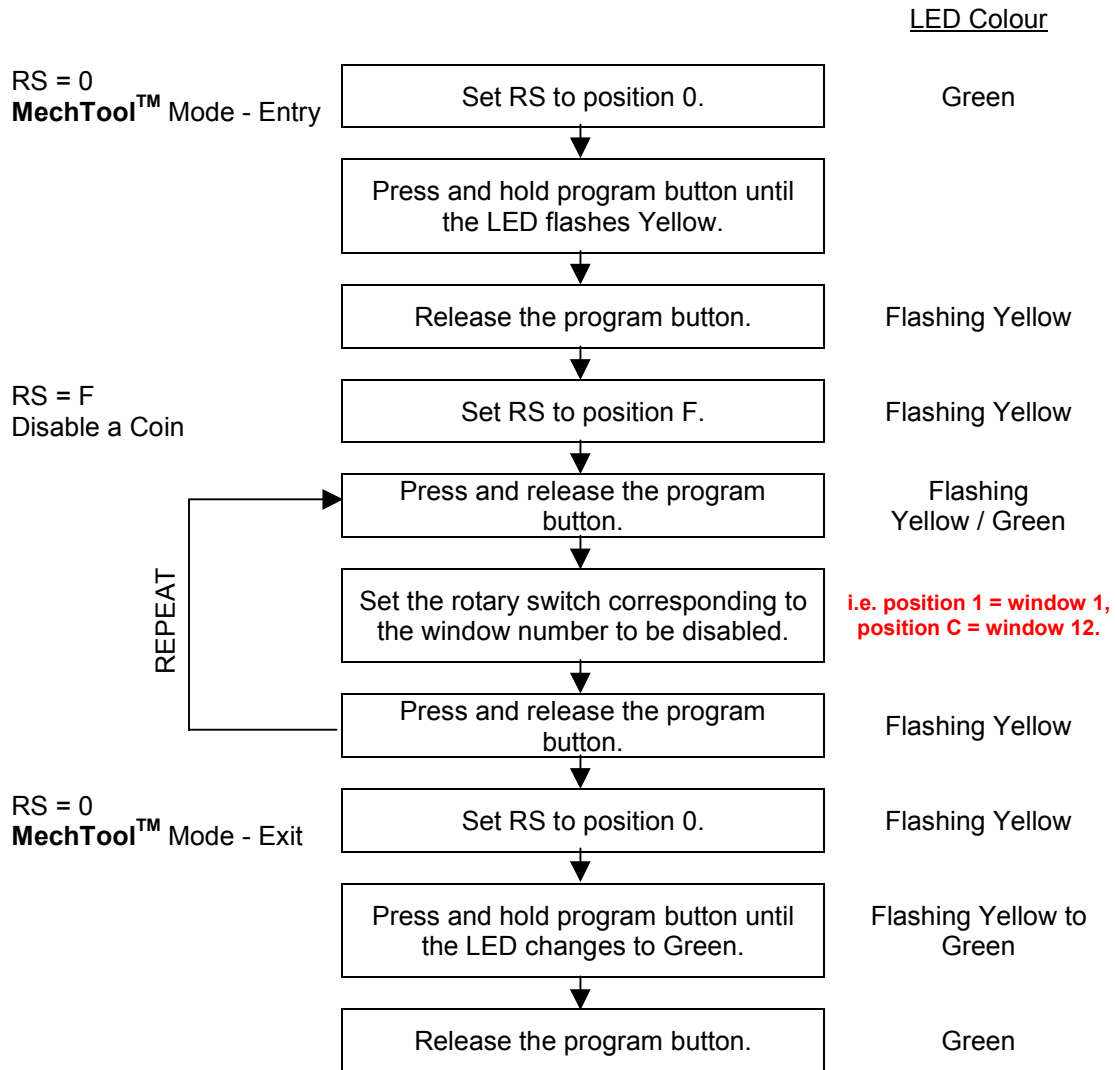

This disables the selected coin window.

Note: this does not affect any other coin, only the selected coin inhibit is changed.

This manual is intended only to assist the reader in the use of this product and therefore Money Controls shall not be liable for any loss or damage whatsoever arising from the use of any information or particulars in, or any incorrect use of the product. Money Controls reserve the right to change product specifications on any item without prior notice