

# Compact Hopper Quick Change Disc Replacement Instructions



This document is the private unpublished property of Money Controls Ltd and may not be reproduced in part or in total by any means, electronic or otherwise, without the written permission of Money Controls Ltd. Money Controls Ltd does not accept liability for any errors or omissions contained within this document. Money Controls Ltd shall not incur any penalties arising out of the adherence to, interpretation of, or reliance on, this standard. Money Controls Ltd will provide full support for this product when used as described within this document. Use in applications not covered or outside the scope of this document may not be supported. Money Controls Ltd. reserves the right to amend, improve or change the product referred to within this document or the document itself at any time.

## **WARNING:**

Ensure that power has been removed from the hopper before any maintenance operations are performed.

**NOTE: coin dust may accumulate in the hopper during use. Inhalation of the dust should be avoided during maintenance operation.**

### **Contents**


1. Diary of Changes .....	3
2. Kit Contents .....	4
3. Changing the Disc. ....	5
3.1 Remove Bowl .....	5
3.2 Remove Disk .....	6
4. Changing the Adjuster Plate.....	7
5. Changing the Ejector Fingers.....	8

## 1. Diary of Changes

Issue 2.1.....	12 <sup>th</sup> March 2002
➤ Applied TMWP v3.0	
➤ Added Diary Of Changes	
➤ Added last page disclaimer	
Issue 2.2.....	6 <sup>th</sup> Sept 2002
➤ Modification to disclaimer	

## 2. Kit Contents

In order to change the coinage configuration for an interchangeable disc compact hopper, between 1 and 3 components will need replacing. The parts in question are shown in the photo below.

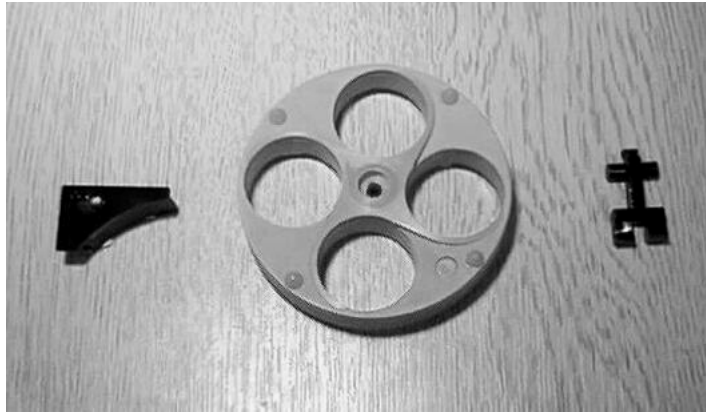


They are, from left to right: ADJUSTER PLATE, DISK, and FINGER

### 3. Changing the Disc.


This is the most common component to change, and is therefore the easiest. Firstly you must access the hopper disc / motor assembly.

#### 3.1 Remove Bowl

Unclip the bowl from base at the back. Ease outer posts in the directions shown below to release the bowl.

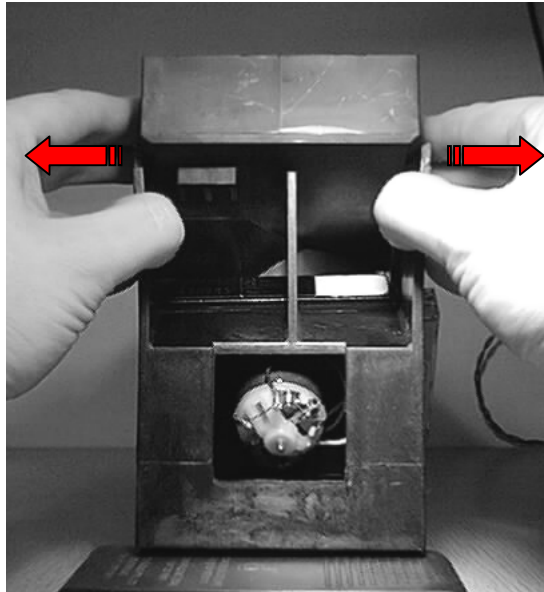

Now remove the bowl by easing it towards the front of the hopper, shown below.

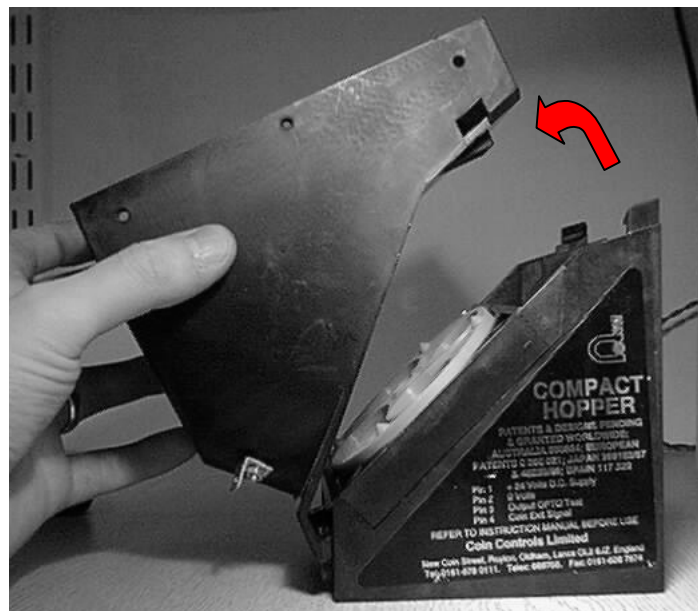


CONFIDENTIAL

Not to be disclosed without prior written permission from Money Controls


Page 5 of 13

### 3.2 Remove Disk

You now have access to the disk. Using a Torx or Pozi-Drive No. 2 screwdriver, turn the central screw anti-clockwise to loosen and remove the screw.

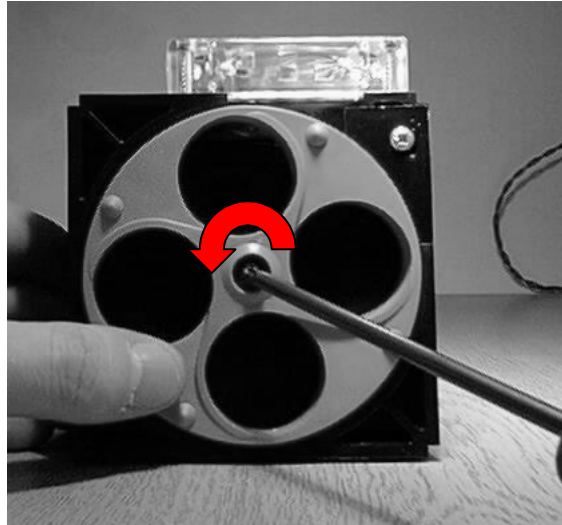

You can now remove the disc by pulling it free of the centre pillar.

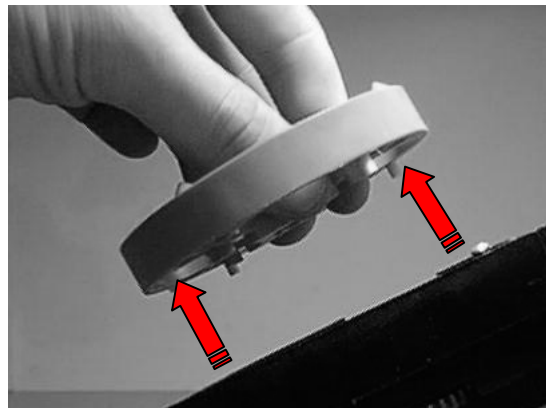

Now fit the new disc by carrying out the above steps in reverse.


## 4. Changing the Adjuster Plate

The adjuster plate ensures that the coin is pressed against the ejection fingers to the correct degree to ensure consistent payout trajectory.


Remove the bowl and disk as per steps 3.1 and 3.2 above.

Using a no. 1 pozi-drive screwdriver, turn the screw anti-clockwise to undo and remove the adjuster plate screw.

**NOTE: The adjuster plate can be removed and replaced with the disc still installed.**

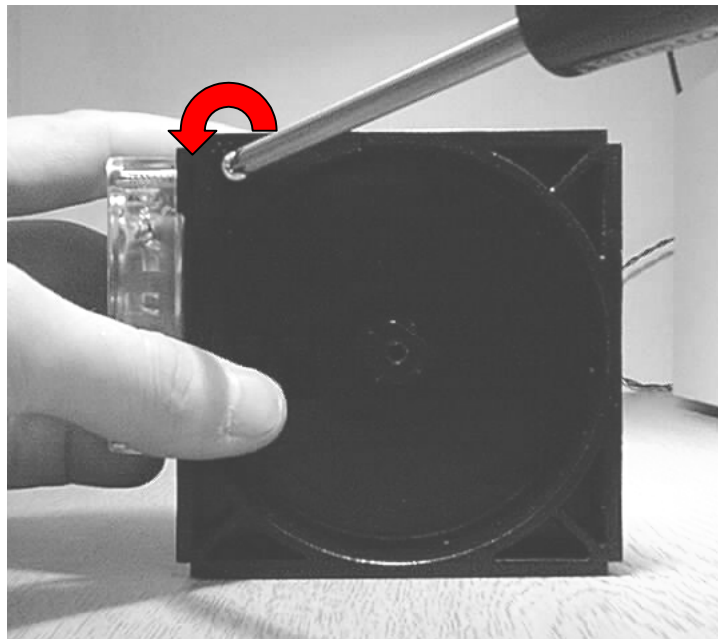

Now fit the new adjuster plate. Most plates (including the Euro) have just one crew hole and so positioning is straight forward. If there are 2 holes in the new adjuster plate, they are referred to as positions 'A' and 'B'. The picture below shows the different locations – use the correct hole for qualified performance. For specific coinage information contact MCL Technical support.

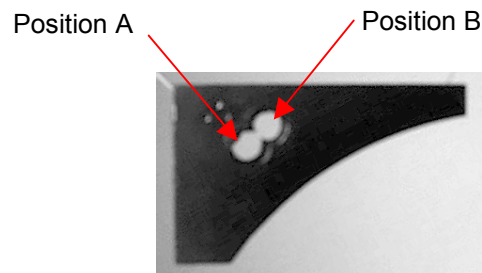


Refit the bowl by carrying out step 3.1 above in reverse.

## 5. Changing the Ejector Fingers

This is the least commonly changed part and requires some manual dexterity to achieve.


Remove the bowl as per step 3.1 above.

Remove the hopper motor/disk bed assembly from the base as shown below.

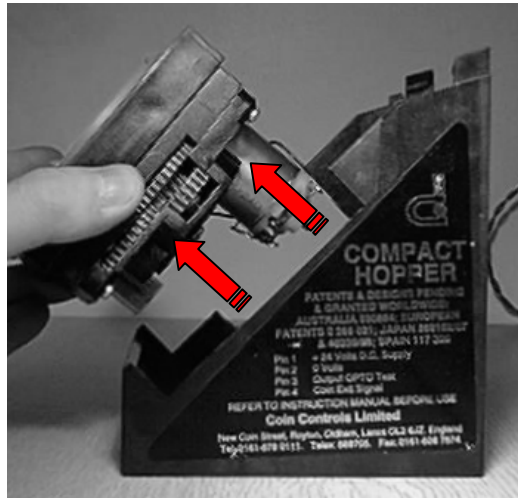

Place the hopper bed assembly face down on a flat, supportive work surface with the disc downwards.

Using a no. 1 pozi-drive screwdriver, turn the ejector cover screw anti-clockwise to undo and remove the screw. Remove the cover.

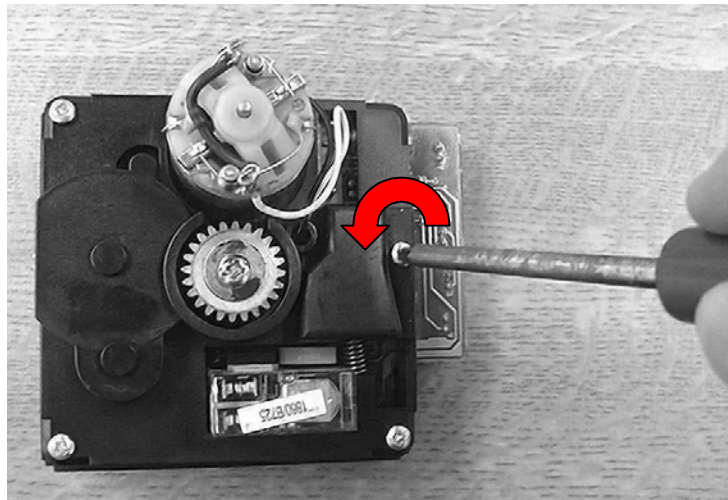

CONFIDENTIAL


Not to be disclosed without prior written permission from Money Controls

Page 8 of 13




Using a spring hook or similar device, un-hook the ejector spring from the finger by pulling away from the fixed end of the spring and then releasing the tension in the opposite direction.

**BE CAREFUL! THIS IS THE MOST DIFFICULT PART OF THE OPERATION AND INJURY CAN OCCUR IF PROPER CARE IS NOT TAKEN.**

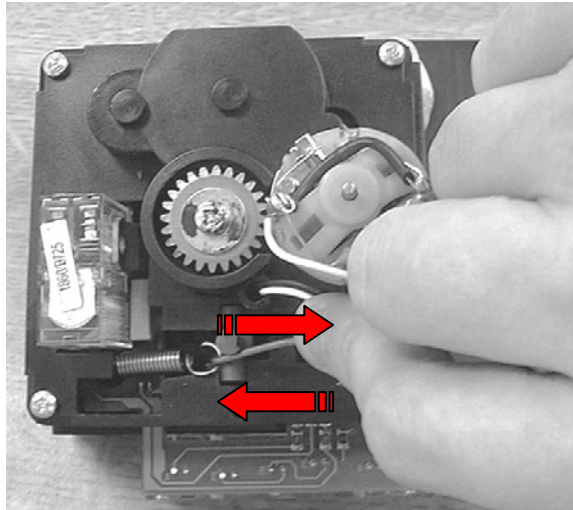

Now pull the spring to one side so that it does not impede the removal of the ejector.

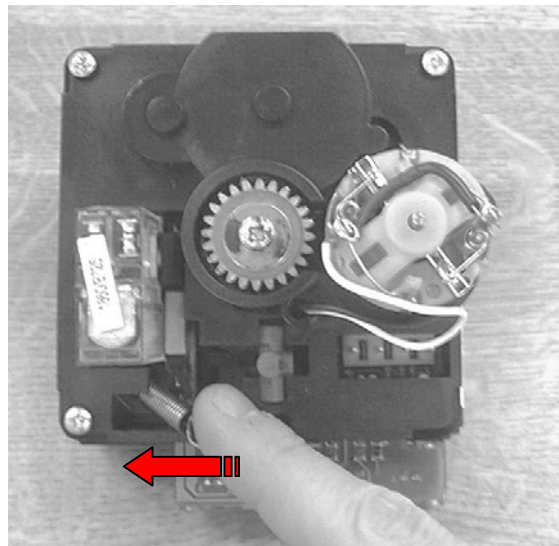


---

CONFIDENTIAL


Not to be disclosed without prior written permission from Money Controls

Page 9 of 13

Undo the screw completely as shown below.

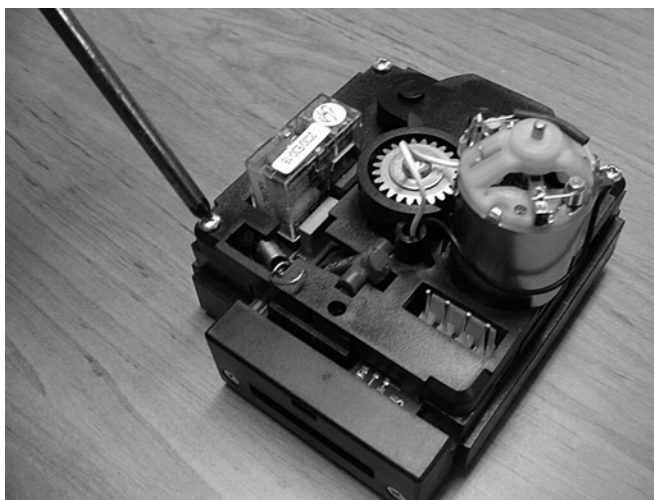

The removal of the ejector is difficult at first, but with practice becomes easy. Firstly, rock the finger backwards as far as it will go.

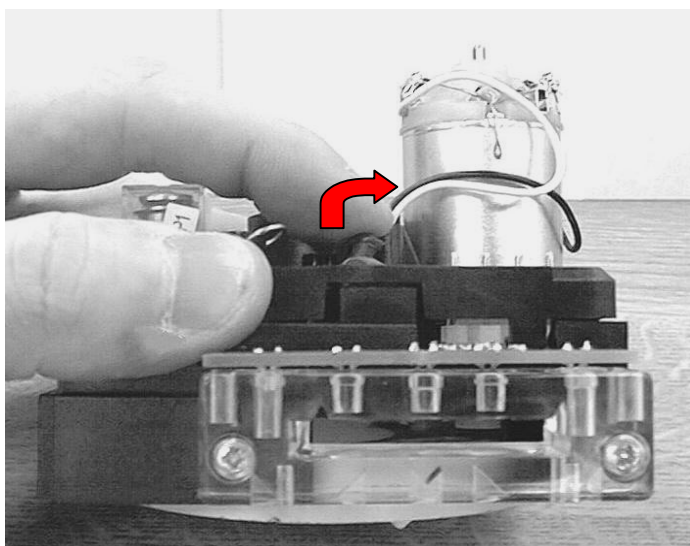

---


CONFIDENTIAL

Not to be disclosed without prior written permission from Money Controls  
Page 10 of 13


Then, whilst gripping the tip of the ejector finger (shown above) turn the hopper over and push out the fingers from its locating holes until they are moving freely.




Insert a flat screwdriver as shown between the disc bed and gearbox cover and gently lift the gearbox cover.

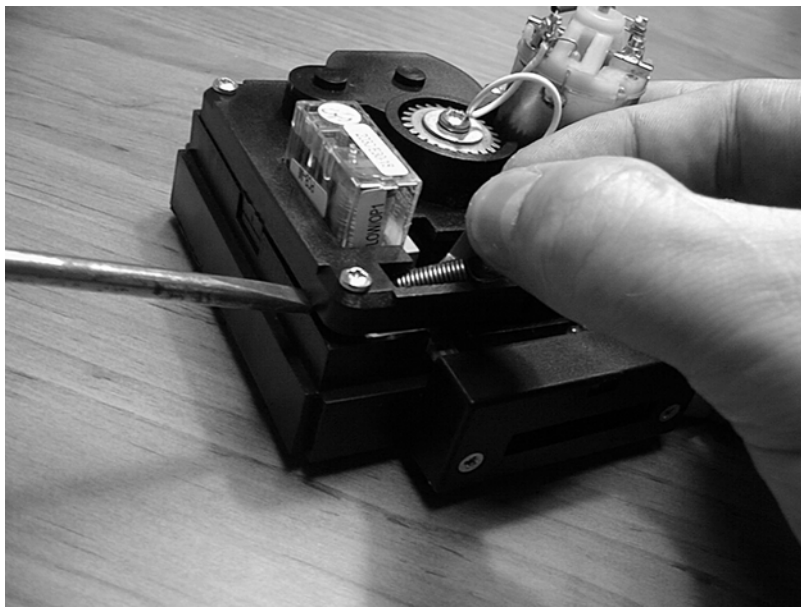

Now lift and twist the fingers in a clockwise direction to remove from the disc bed.

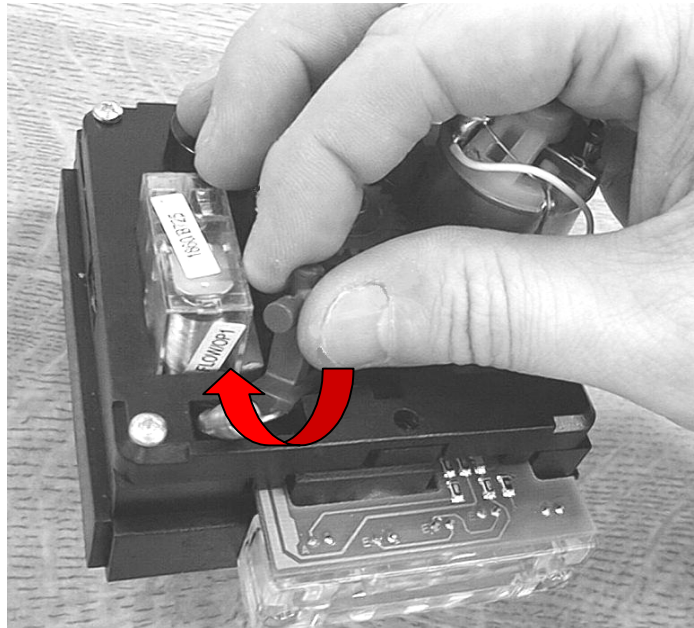

The ejector will now be free and can be lifted from the recess.

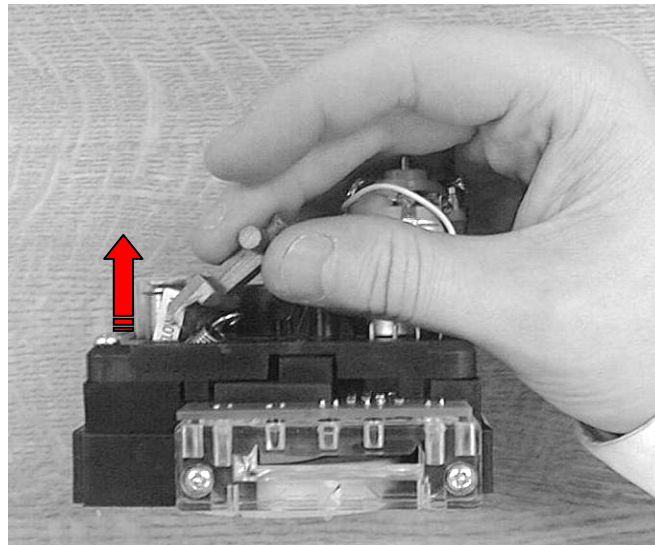

Now fit the new ejector; replace the spring and ejector cover by following the above steps in reverse.

**ONCE AGAIN – BE CAREFUL WHEN RE-FITTING THE SPRING. CARE MUST BE TAKEN.**

---

CONFIDENTIAL

Not to be disclosed without prior written permission from Money Controls

Page 12 of 13

This manual is intended only to assist the reader in the use of this product and therefore Money Controls shall not be liable for any loss or damage whatsoever arising from the use of any information or particulars in, or any incorrect use of the product. Money Controls reserve the right to change product specifications on any item without prior notice